


## FIAT/ JEEP

**500X** 05/2015 >>  
**Renegade** 02/2015 >>  
**Renegade Hybrid** 08/2020 >>

**Part No: FI-048-07MU**

# Electric wiring kit for towbars / 7-pin / 12N / 12 Volt / ISO 1724 Fitting instructions

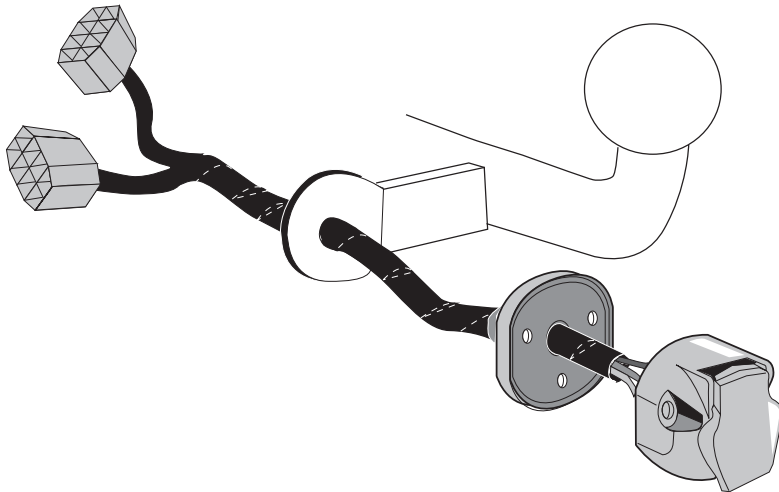

## IMPORTANT!

This electric kit has to be installed by a professional workshop or a suitable qualified person.

The installation instructions must have been read and fully understood before the start of any installation. Please contact your wiring kit provider or the hotline shown in the footer should you need assistance!

Make sure the vehicle is approved/homologated by the manufacturer to tow a trailer!

Also please check that there is a definite compatibility between this vehicle and the electric kit!

Following the installation of the electric kit, the fitting instructions should be kept together with the vehicle service document and vehicle handbook. The fitting instructions contain important information relating to the use and function of the towing kit as well as for any diagnostic or activation process, that might have to be repeated in the future (e.g. after the performance of a vehicle software update).

All warranty claims will be forfeited if the electric kit or components contained therein are used incorrectly or modified. If a towing socket adaptor has been used to connect to the trailer or bike rack, this must be removed from the trailer socket once the trailer or bike rack has been disconnected.

If the trailer or bike rack is not equipped with a rear fog lamp, depending on the towing vehicle type, the correct function of the towing kit cannot be guaranteed. In such cases, a rear fog lamp should be retro fitted.

This towing electric kit will not be covered under warranty if any technical or electrical modifications or software updates have been performed by the vehicle manufacturer after the initial commissioning of the kit. That applies especially to modifications or updates which may cause malfunctions in the trailer socket or any other part of the trailer electrical equipment!

Depending on the type of trailer module used in this electric kit, diagnostic interrogation with the vehicle's electrical system may be limited or will not function. The error memory inside the trailer module may not be able to be accessed by vehicle manufacturers diagnostic system.

Error logs relating to the trailer electrical equipment, that may be generated in the vehicle manufacturers diagnostic system as a result of a test procedure, may be due to the incorrect installation of the towing electric kit or the false activation of the trailer module.



**We always recommend whenever possible, the following troubleshooting process:**

- An analysis of the vehicle's error memory and possibly clearing of all faults before the start of the installation!
- Try disconnecting the trailer module from the towing harness and re-start the fault clearing process!
- If in doubt, limit the time for troubleshooting to a max of 0,5 hours and call our Technical Support Team!


Please follow our instructions carefully and always test the towing electrics using a true lighting board or a specifically designed bulb tester. If an LED tester is used, ensure it is equipped with correct load resistors or malfunctions will occur!

This instruction is subject to changes and we reserve the right to make changes to design, colour etc.

All of the data and illustrations may not be an exact representation but the text contained in this instruction must be observed!

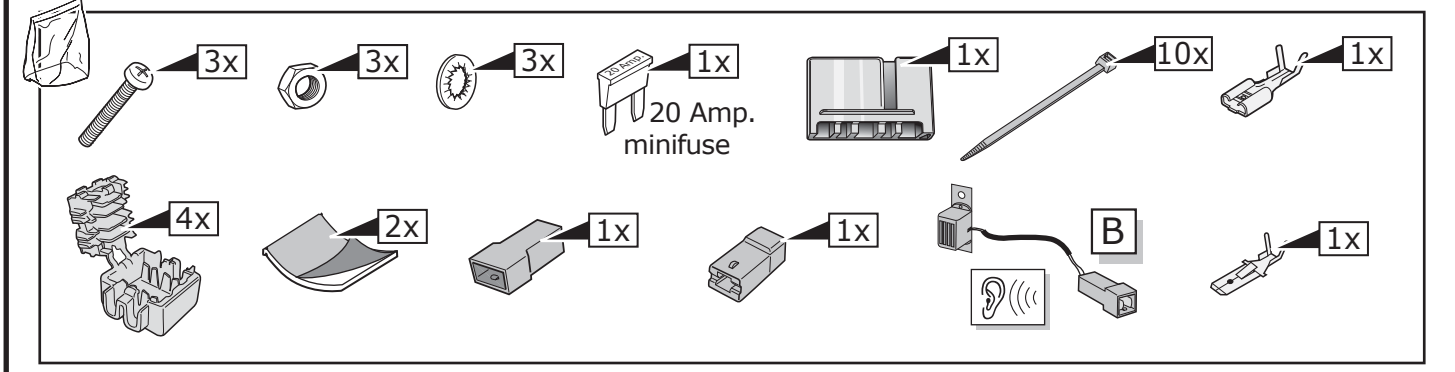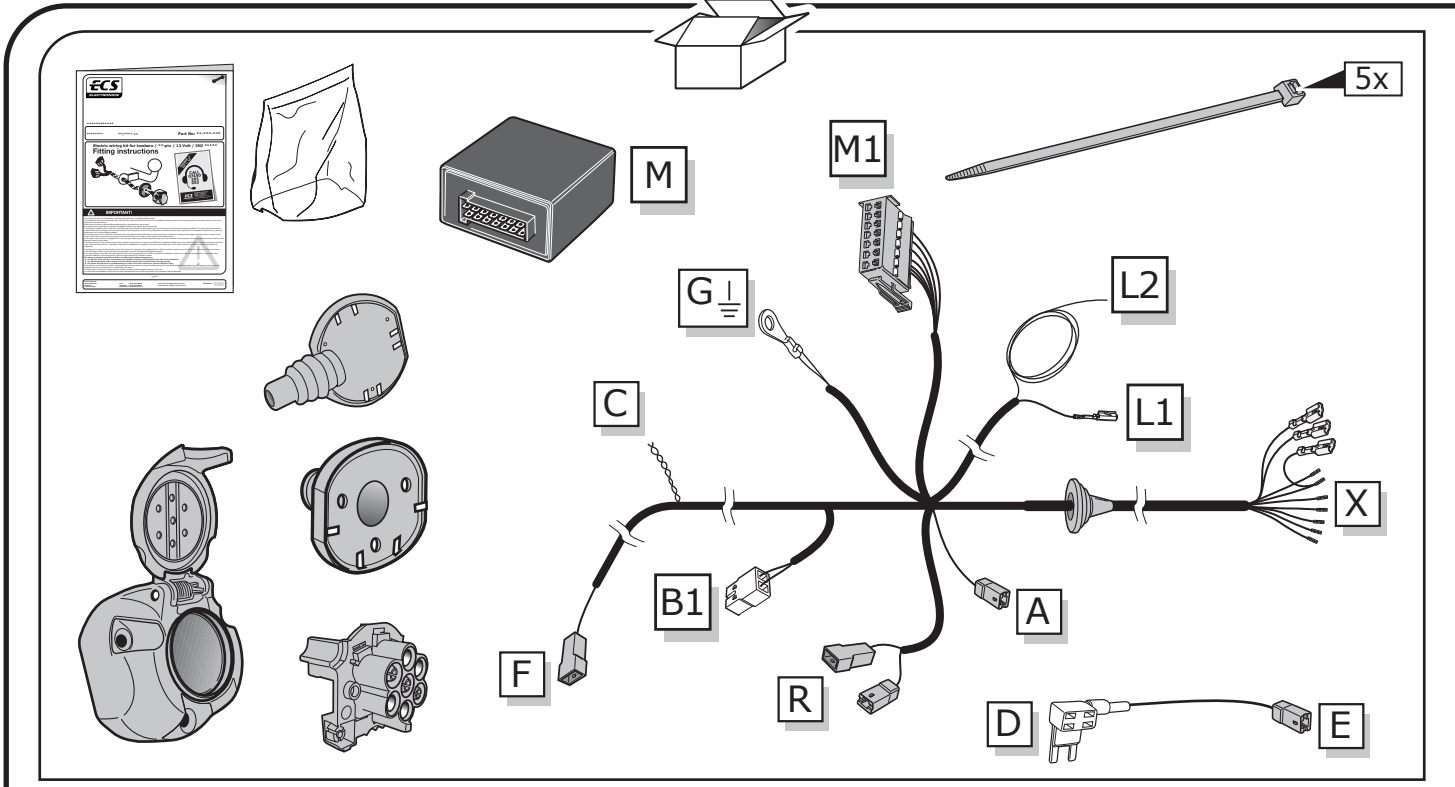

FIAT 500X / JEEP Renegade


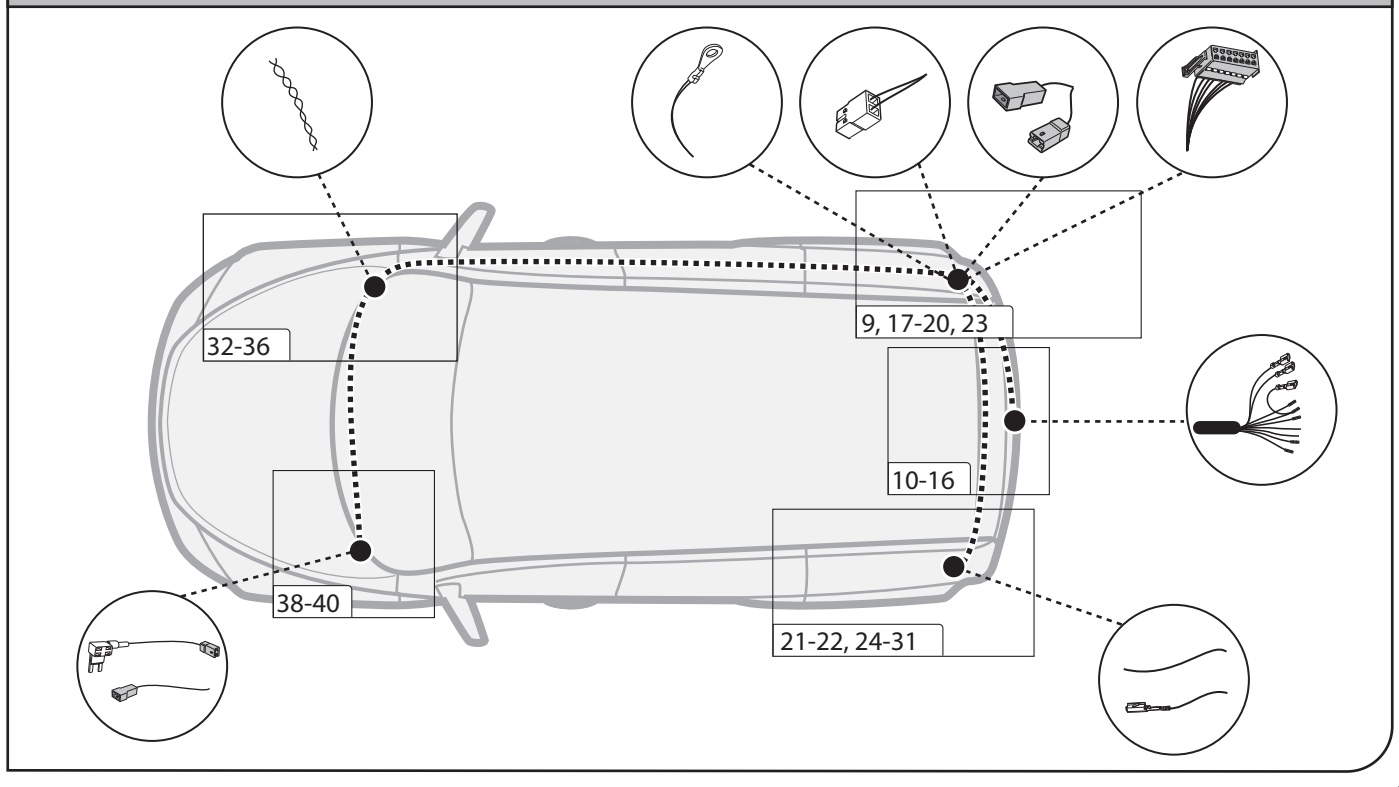


## SYMBOL EXPLANATION

|                |   |
|----------------|---|
|                | Left (58-L) respectively<br>Right (58-R) tail light             |
| 54             | Stop light (54) /<br>high mounted, third stop light (54)        |
|                | Turn signal indicator left                                      |
|                | Turn signal indicator right                                     |
|                | Rear fog light(s)   |
|                | Reversing light(s)  |
|                | Permanent power supply /<br>13pin socket, chamber 9             |
|                | Charging wire for trailer battery /<br>13pin socket, chamber 10 |
|                | Trailer / trailer recognition                                   |
| <b>B+ / 30</b> | Permanent current power supply                                  |
|                | Ground or Earth (31)  |
|                | Ground connection battery terminal lug                          |
|                | Positive connection battery terminal lug                        |

|  |   |
|--|---|
|  | Cigarette lighter /<br>accessory socket |
|  | Loudspeaker / buzzer                    |
|  | Park Distance Control                   |
|  | Switch / source of function             |
|  | Connect together                        |
|  | Disconnect                              |
|  | Look at / See further information       |
|  | Look carefully at selected area         |
|  | Present / Occupied / OK                 |
|  | Not present / Not occupied / Not OK     |
|  | Acoustic indication                     |
|  | Attention / important advice            |
|  | Fuse / fuse capacity 20 Ampère          |

## TOOLS

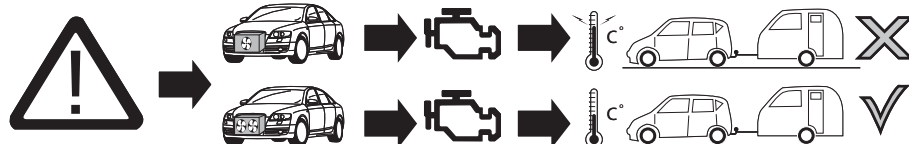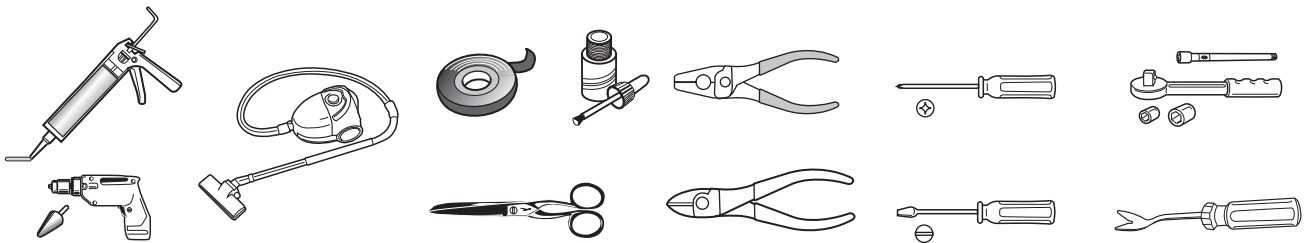

### ATTENTION!

The vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling!  
You must observe the manufacturer's instructions!!



Note: It may be necessary to check if this vehicle has a stored radio code before disconnecting the battery!




### ATTENTION!

In order to avoid mal-functions and damage to the vehicle's electrical system the earth terminal must be disconnected from the vehicle's battery before starting work!


Both the trailer module and the vehicle's control unit for the electrical system can be damaged during work on the data bus connections if the battery is not disconnected!

1 Please pay attention to the manufacturer's instructions when disconnecting and reconnecting the vehicle's battery!


500X

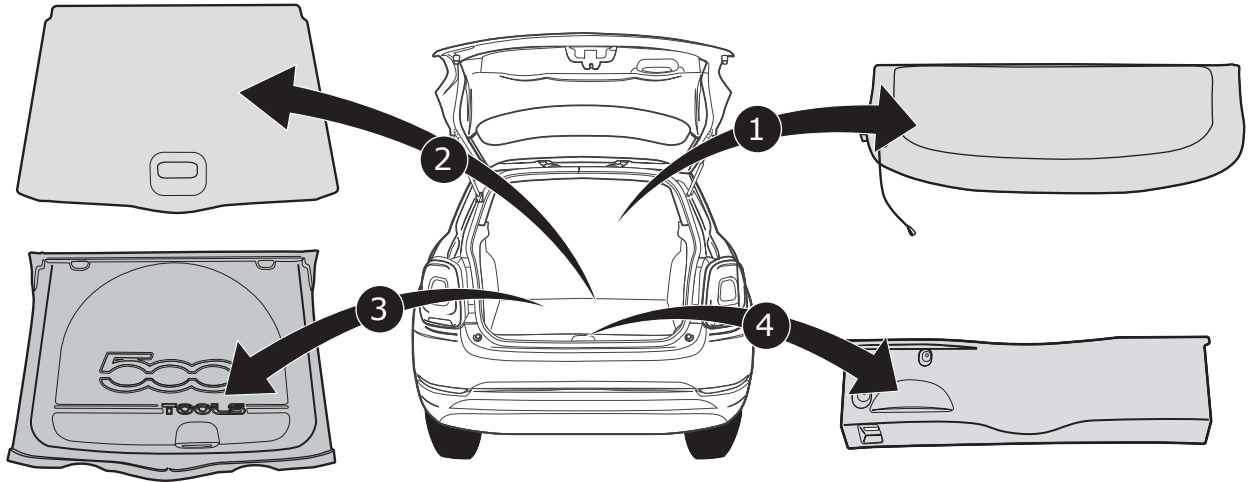


500X

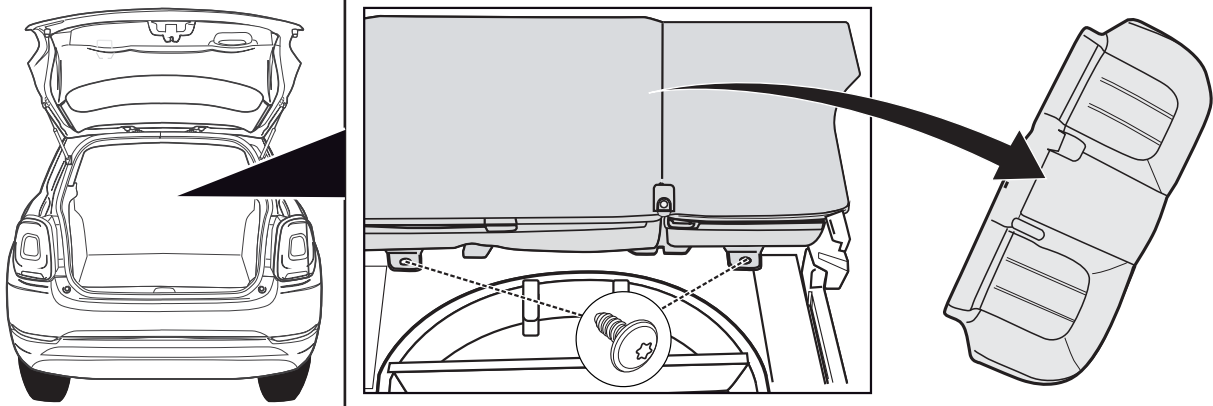

500X

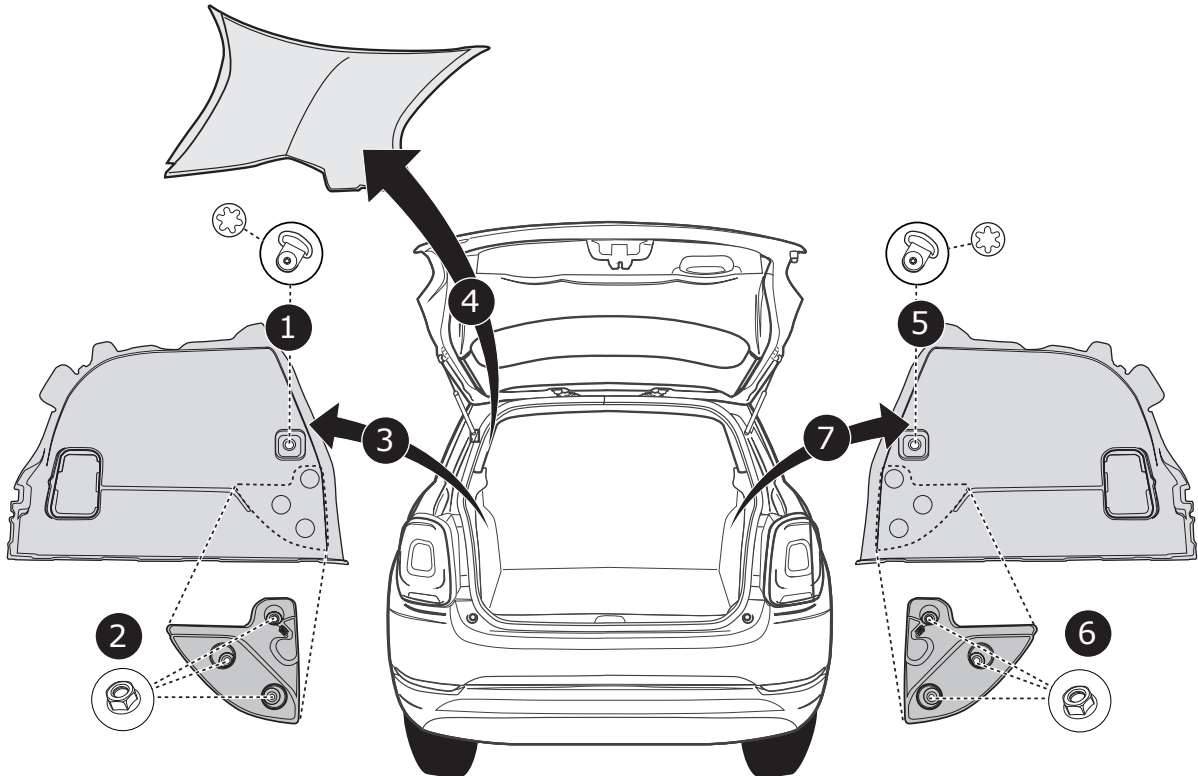


# Renegade

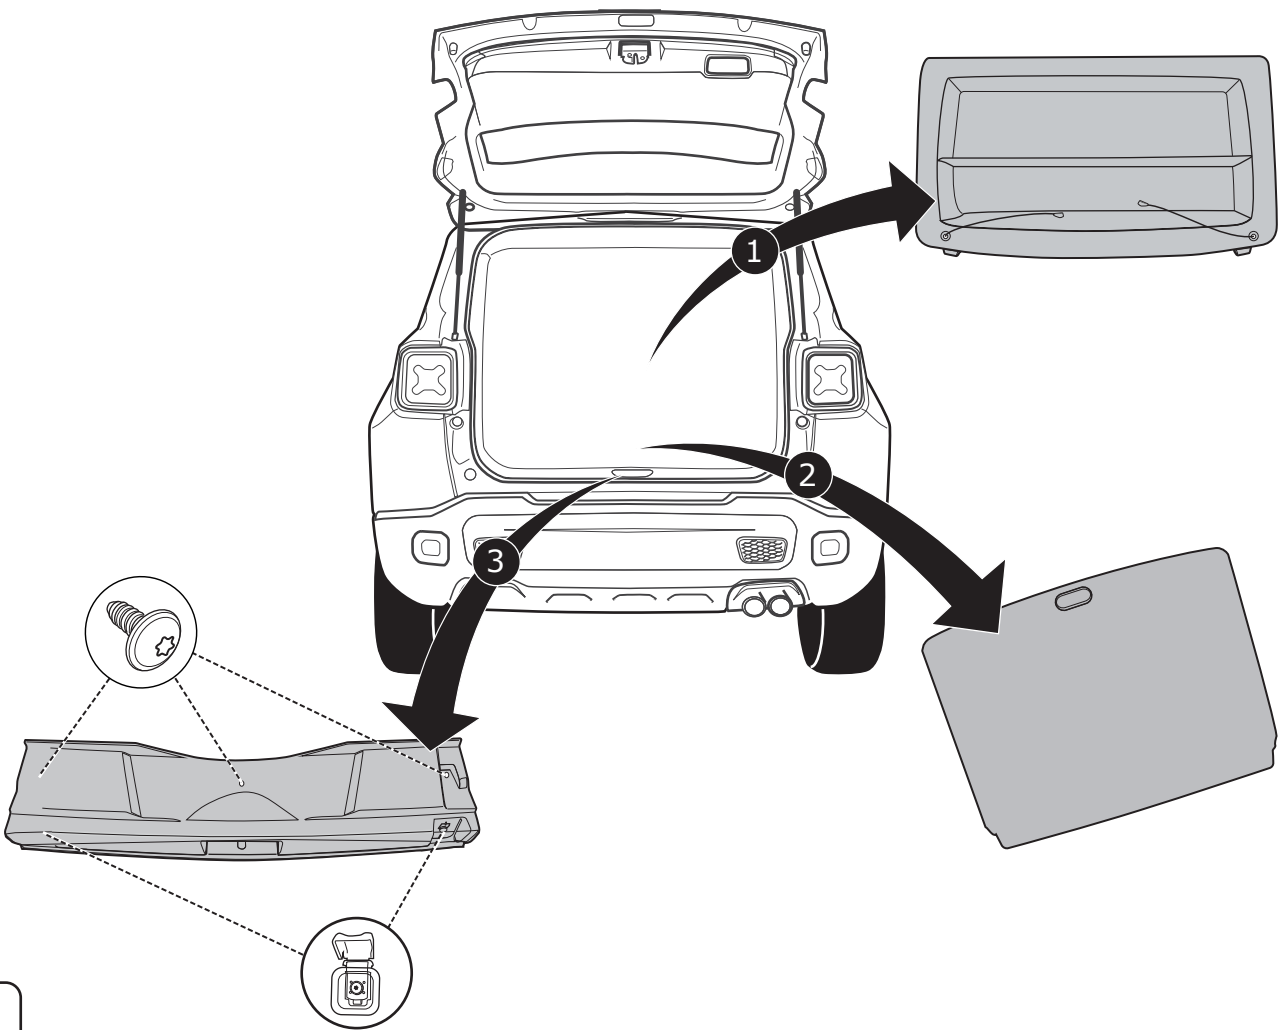


5

# Renegade

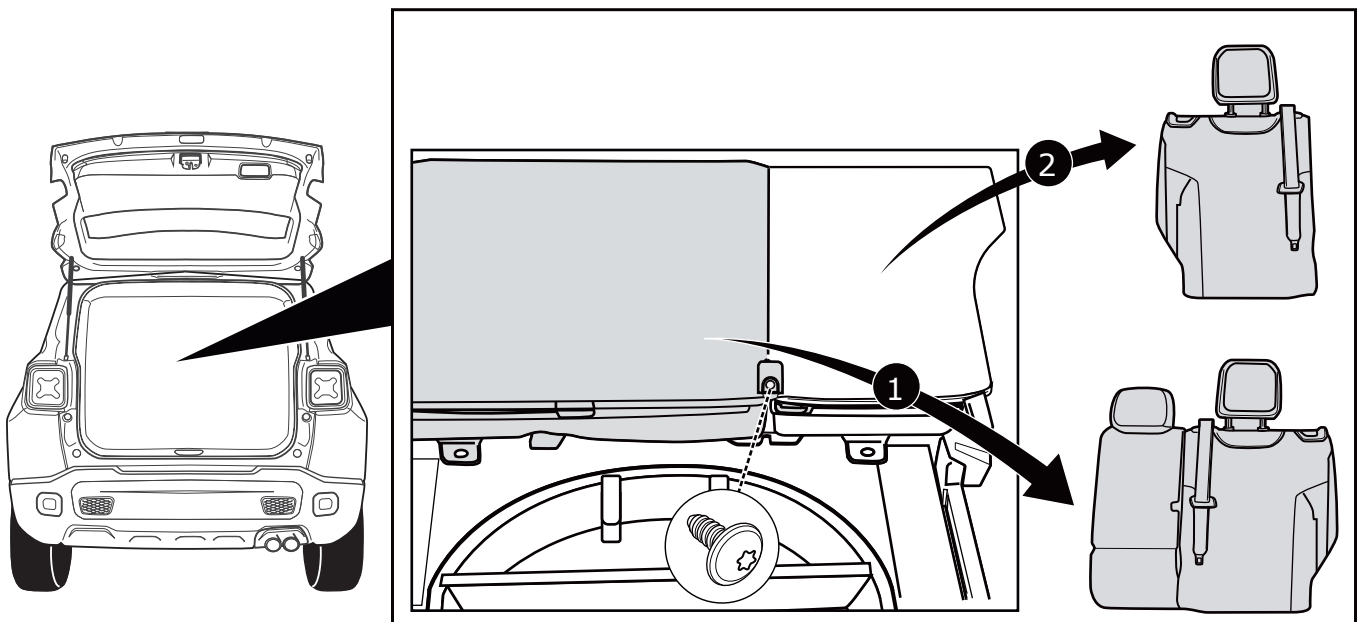


6

## Renegade

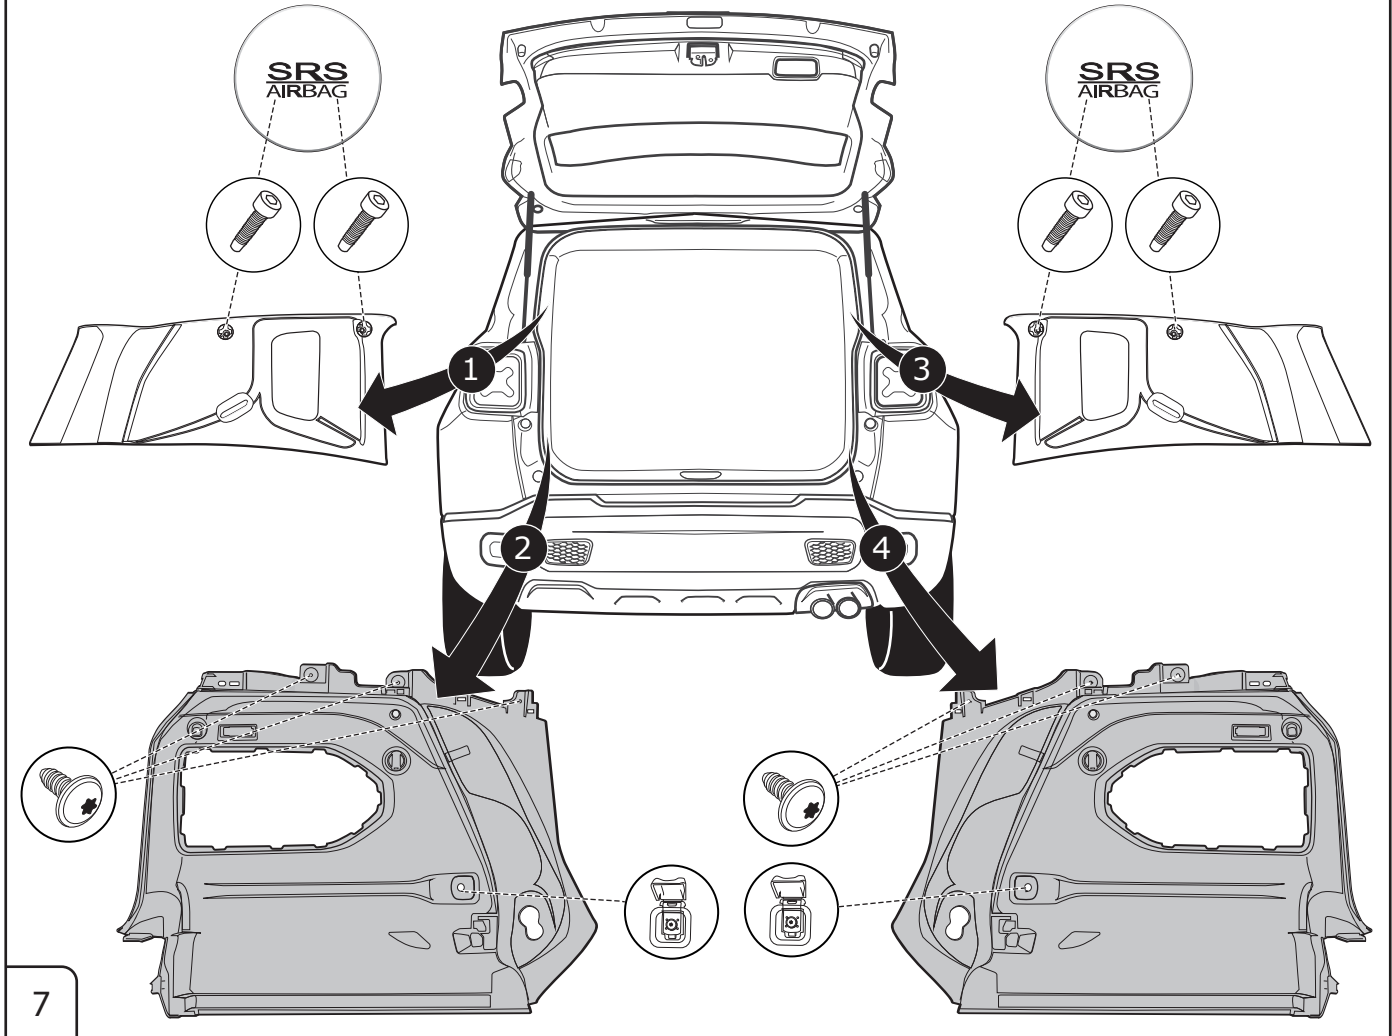


7

## 500X / Renegade




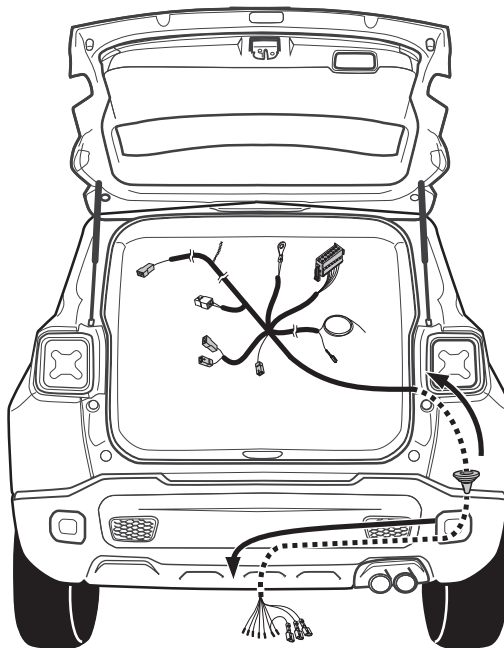


8

Jeep Renegade

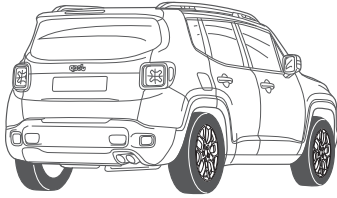


Fiat 500 X

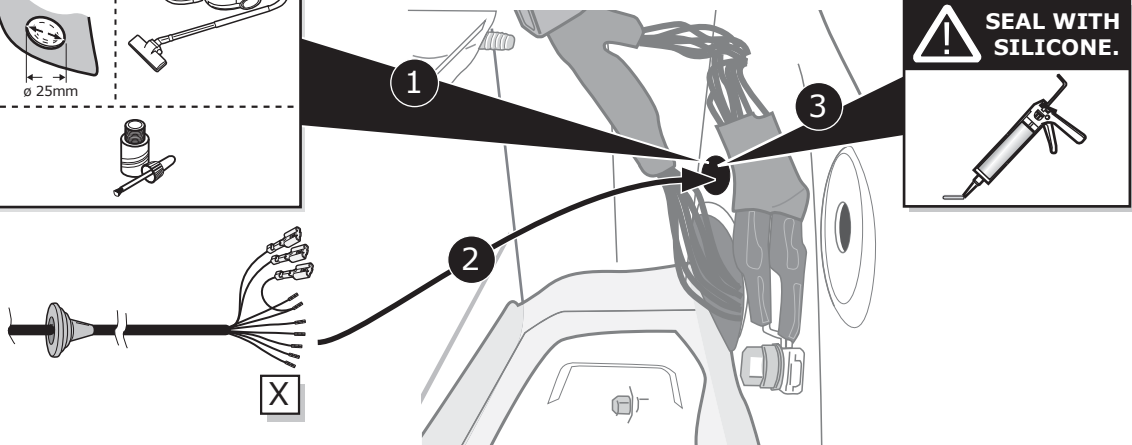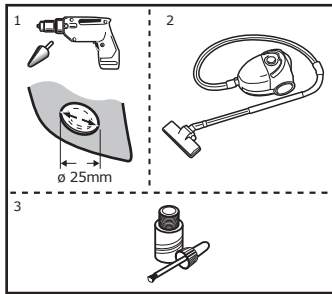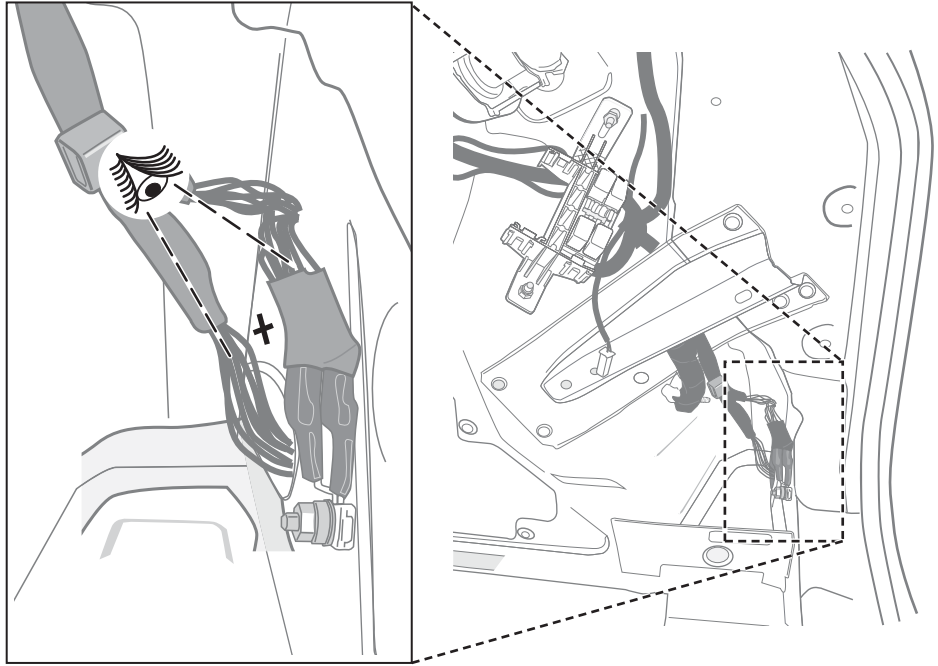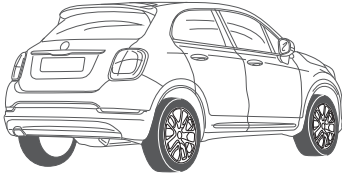


9


Option 1

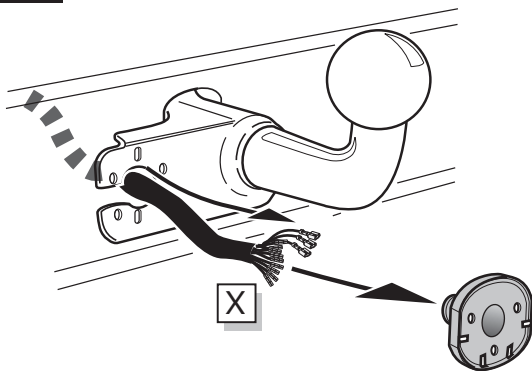

Option 2

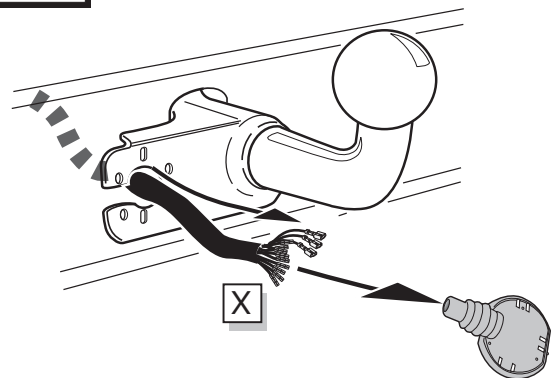


10

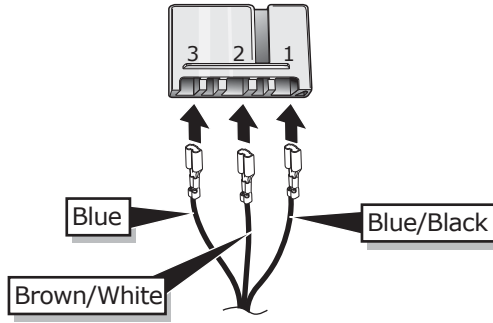

11


SOCKET CONNECTION  

12

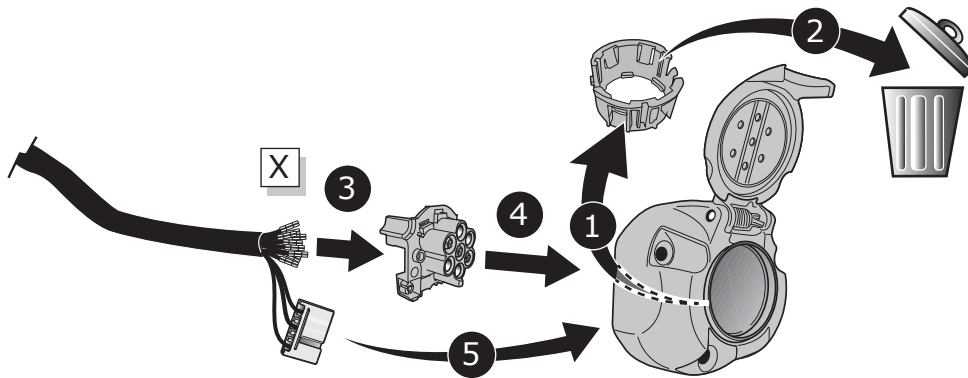

13

Option 1

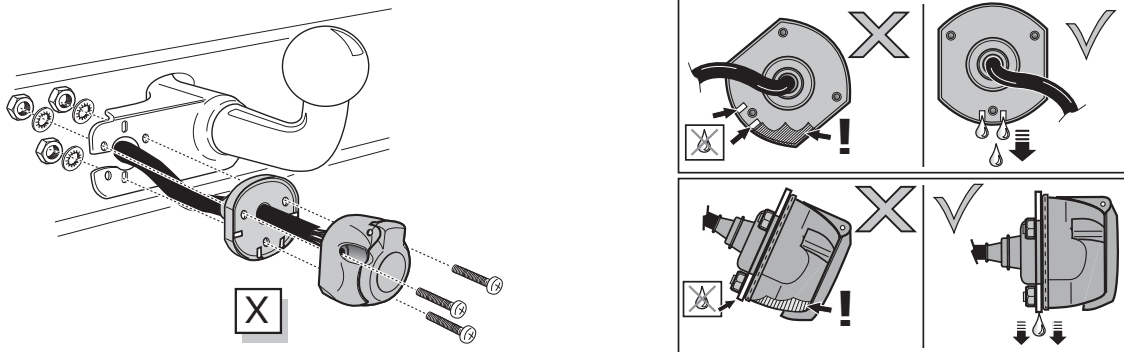


14




Option 2

1

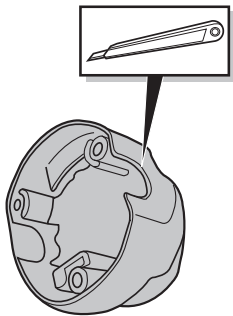


15


2

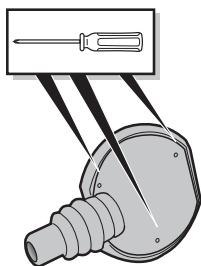

3

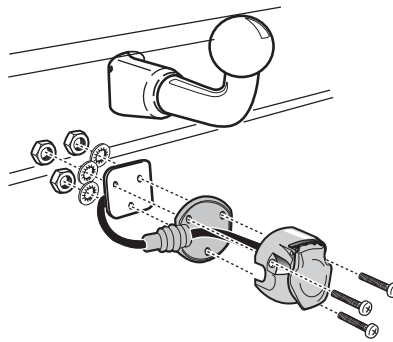


4

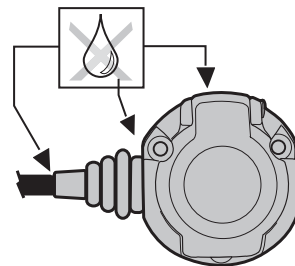


Option 2

1

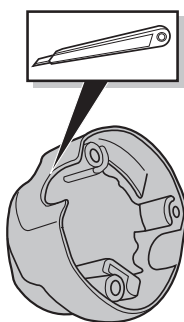


16


2

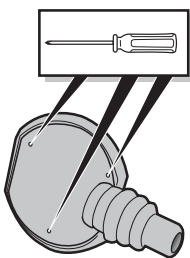


3

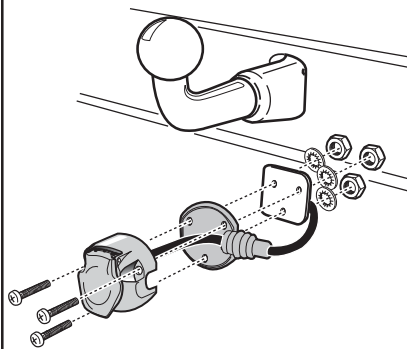


4

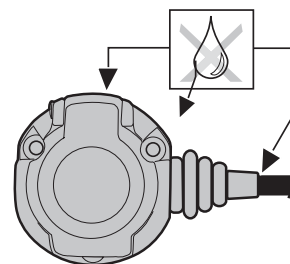



1

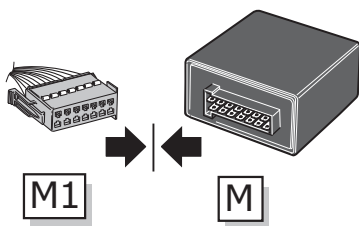


2

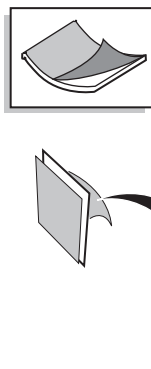


3

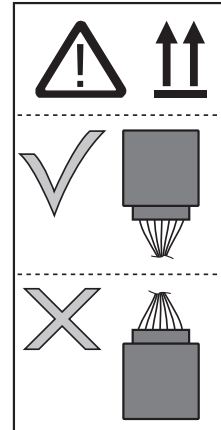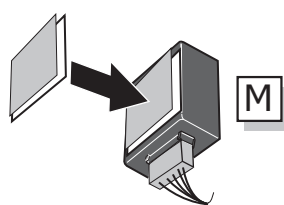

4

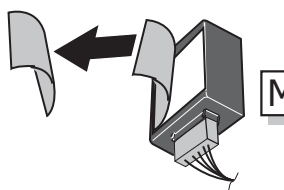


5

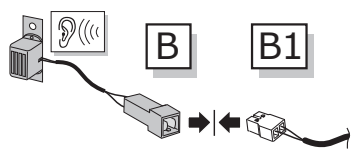


17


6

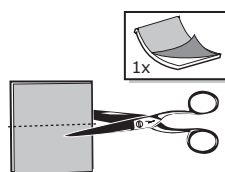


7

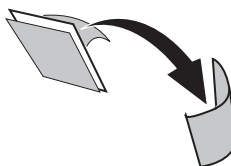



8

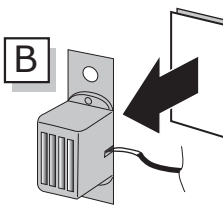

9


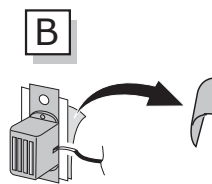


# 500X

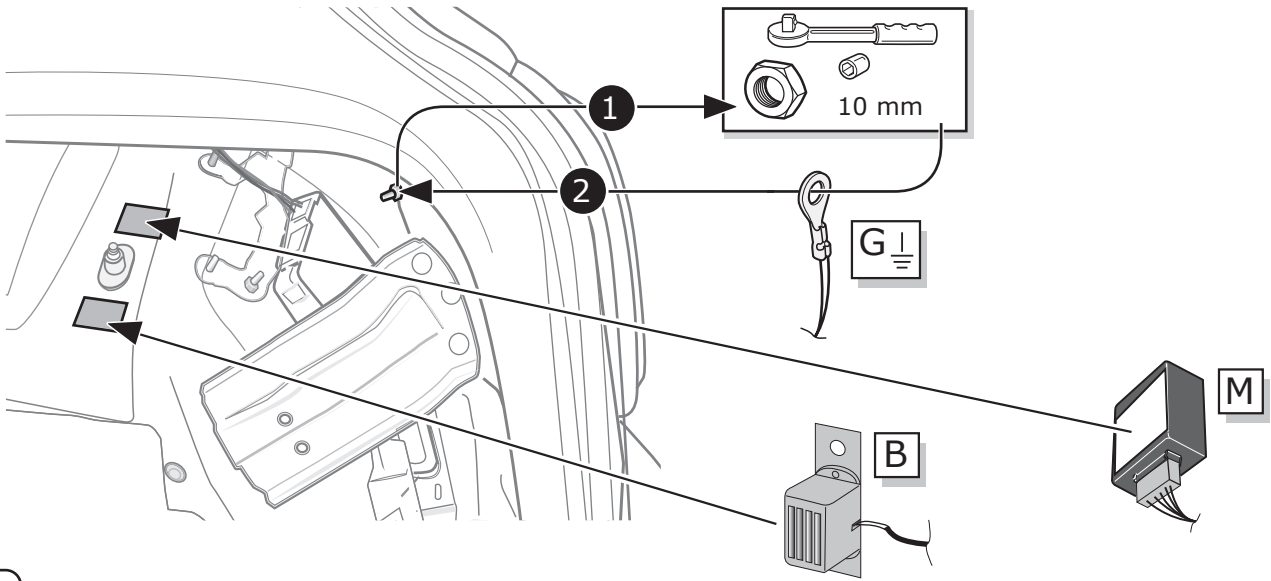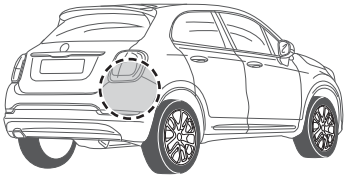





18

# Renegade

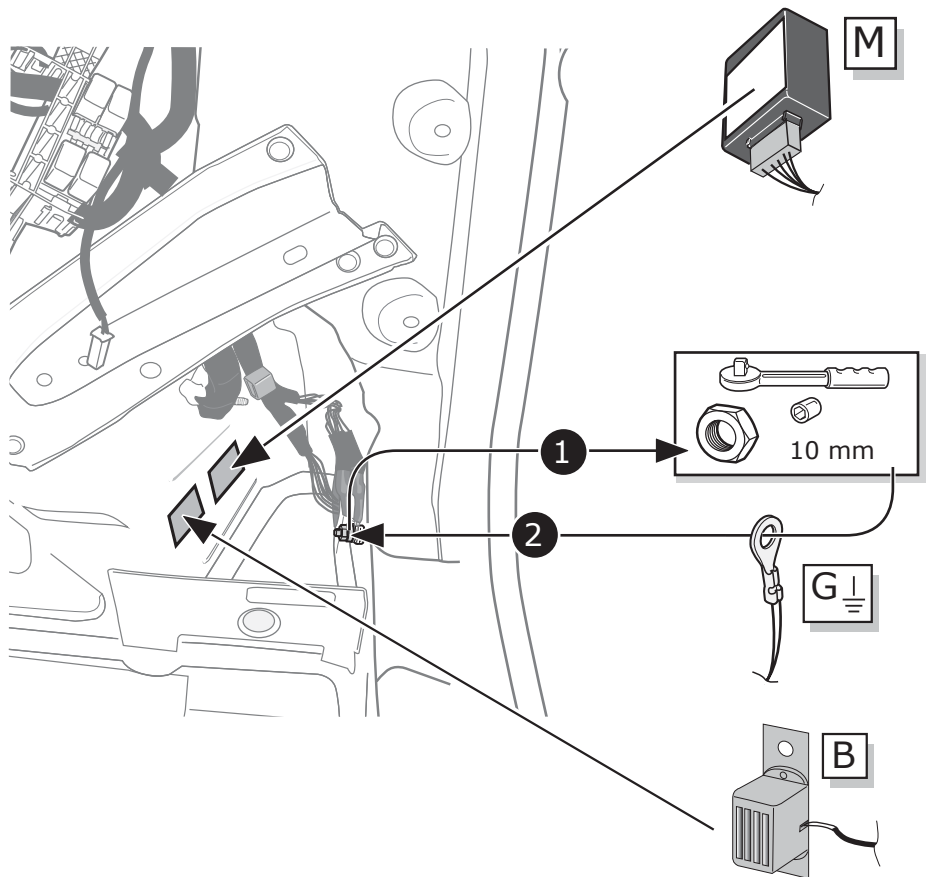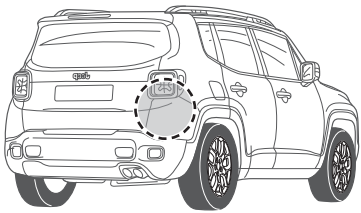


19

500X

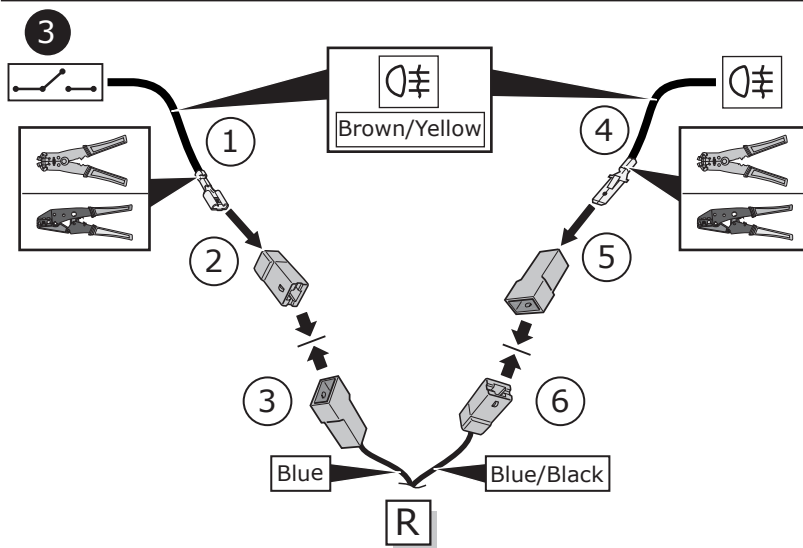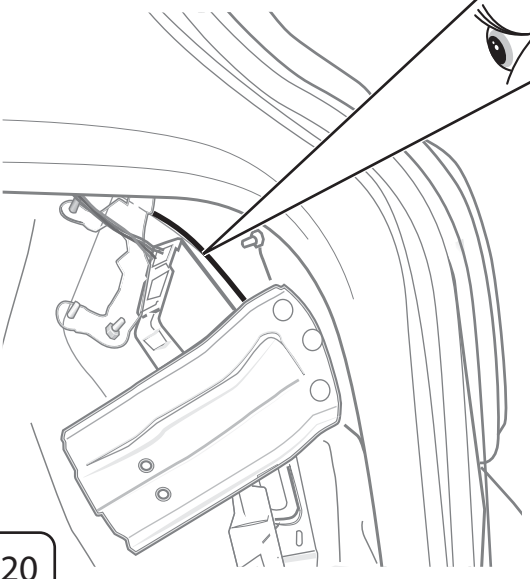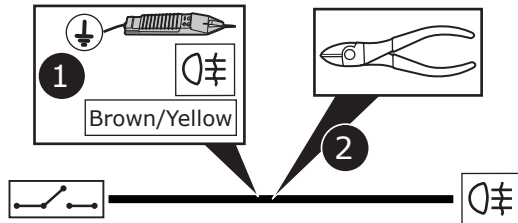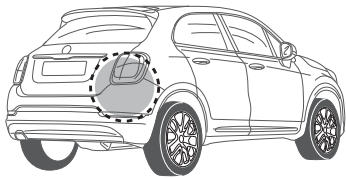



20

500X

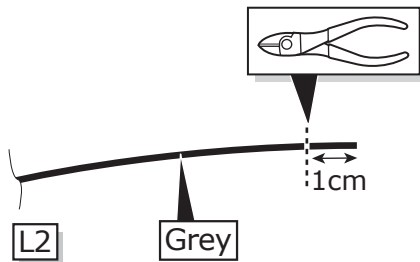





21

500X

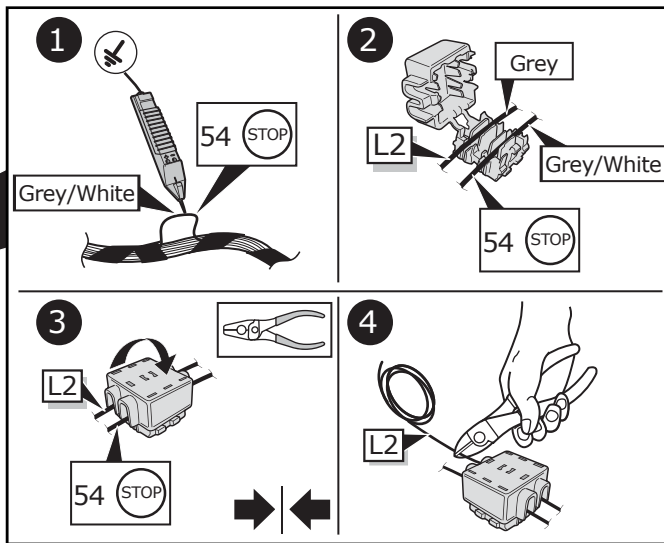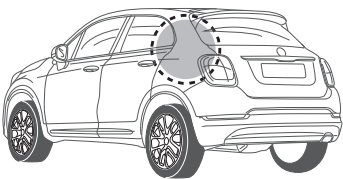

22


## Renegade

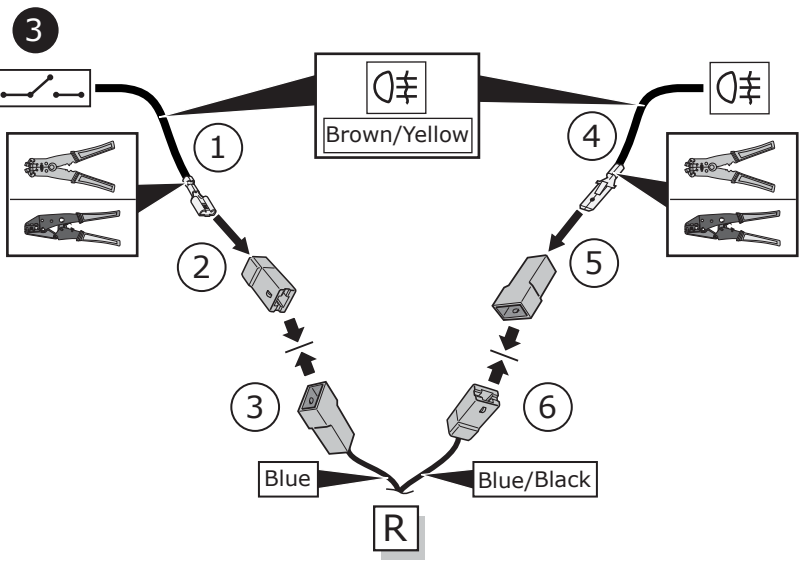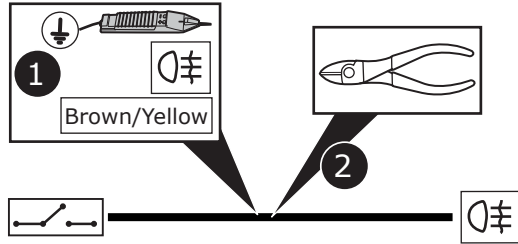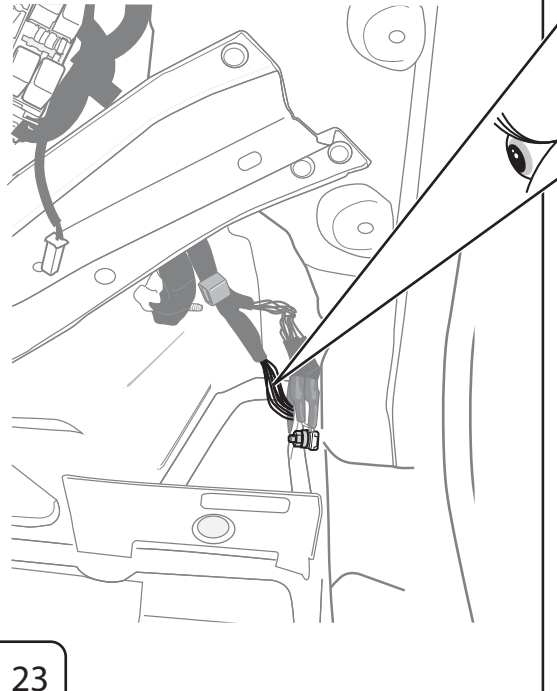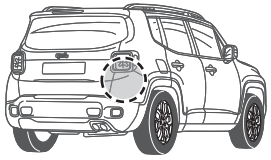

23




## Renegade

cut to length !!

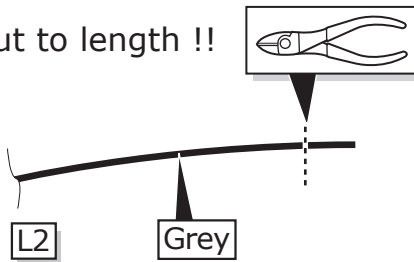

24


## Renegade

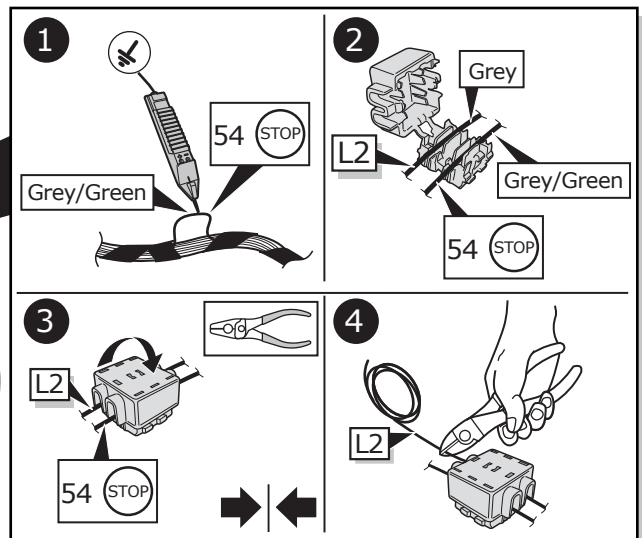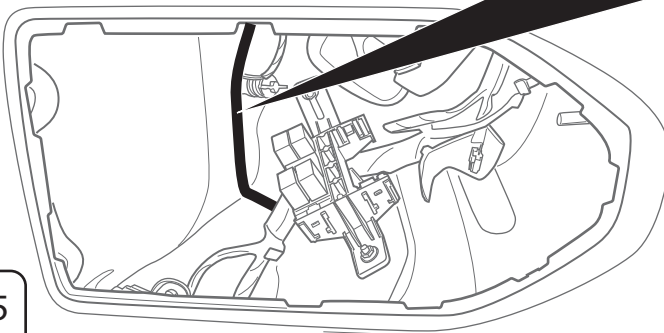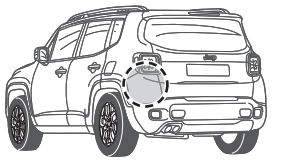


25

500X / Renegade

Vehicles with PDC-System


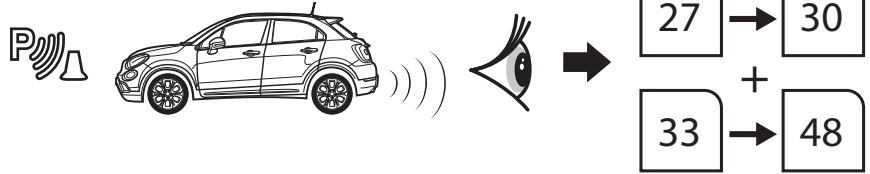


Vehicles without PDC-System


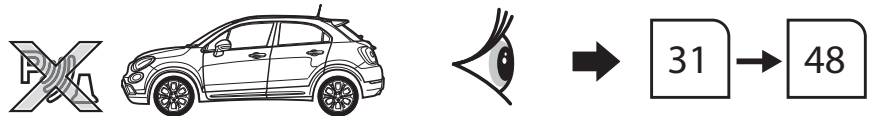


26


500X / Renegade

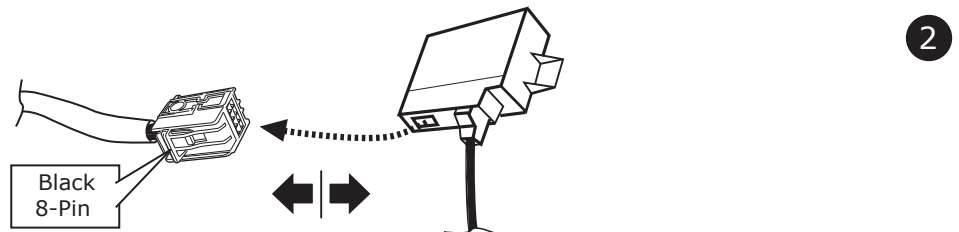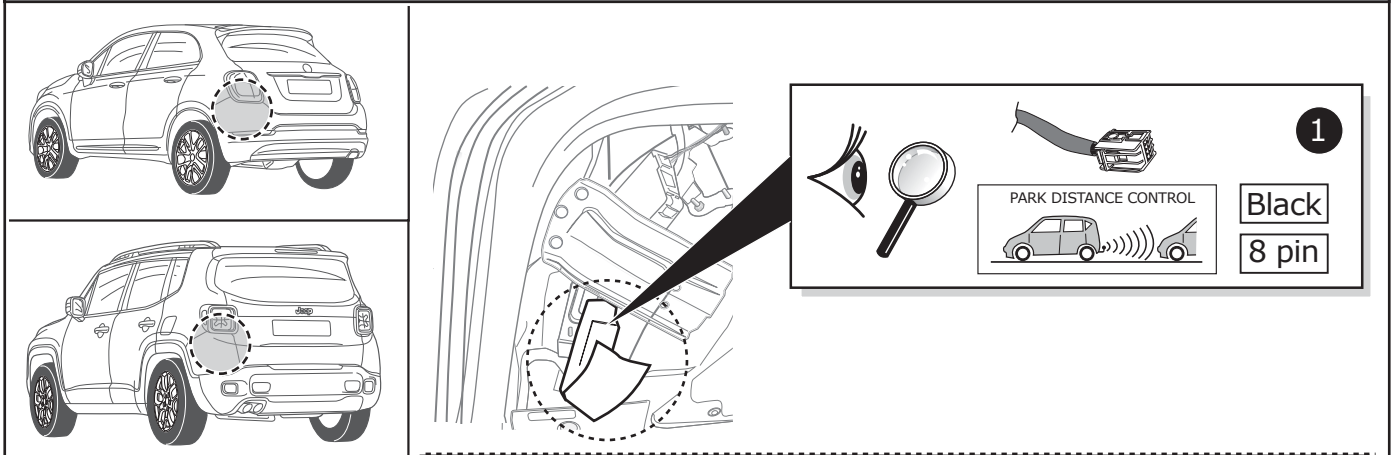


27

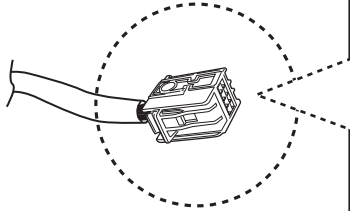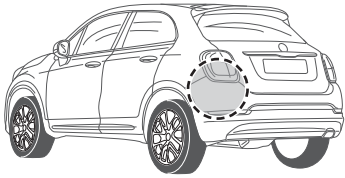


1

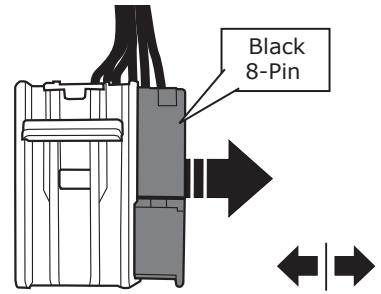



2

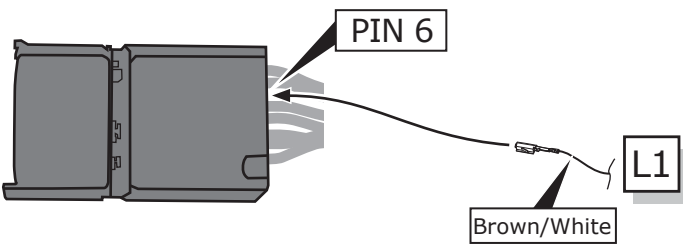



3

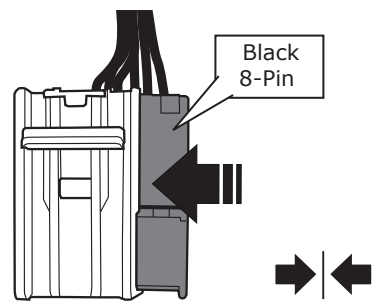

4

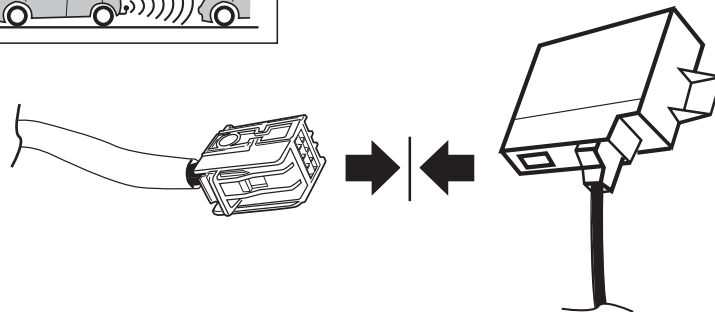
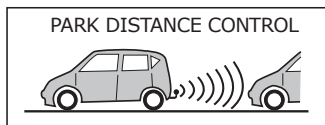


# Renegade

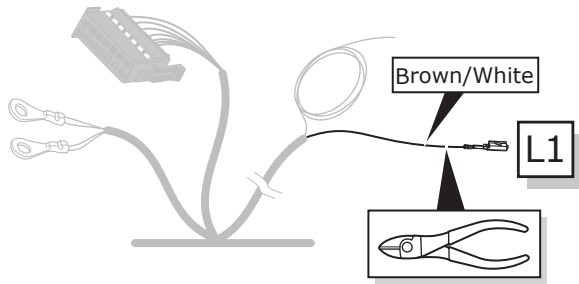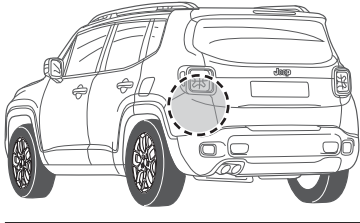


29

# Renegade

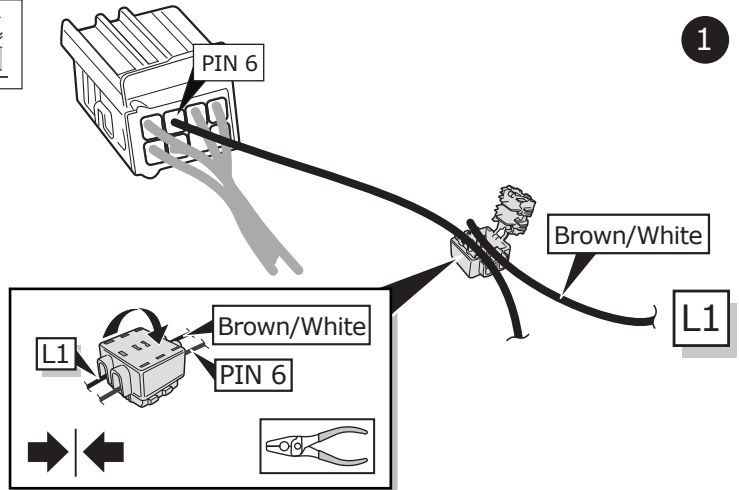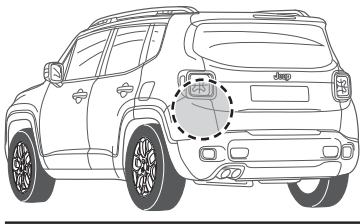


1

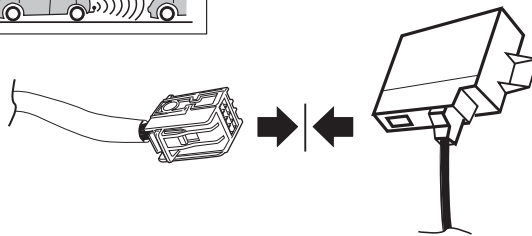


2

30



# 500X / Renegade

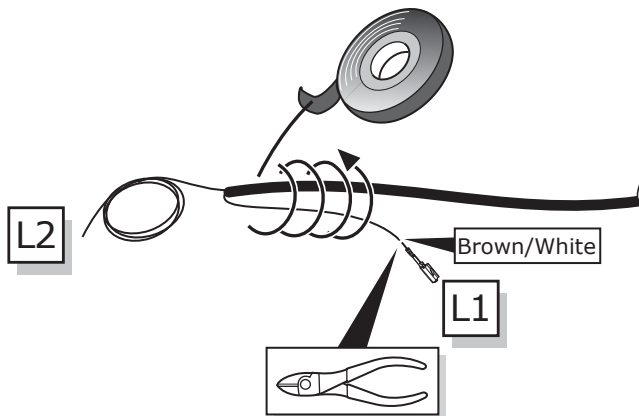

31

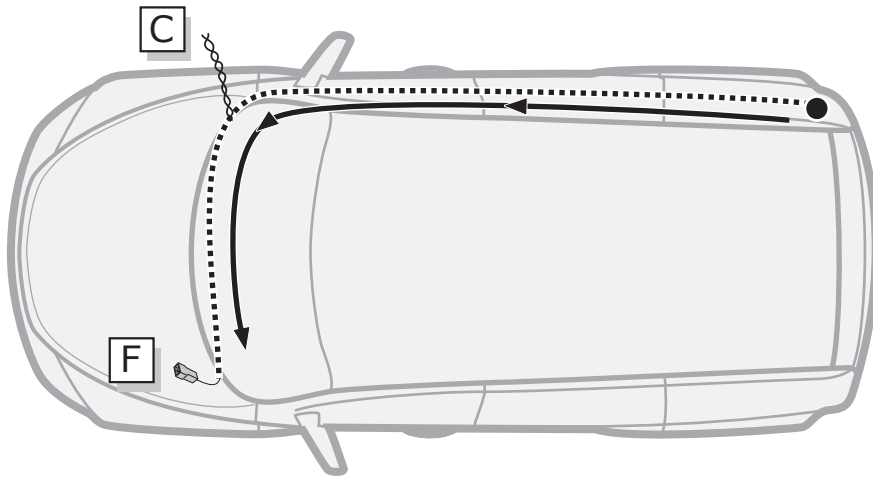

32

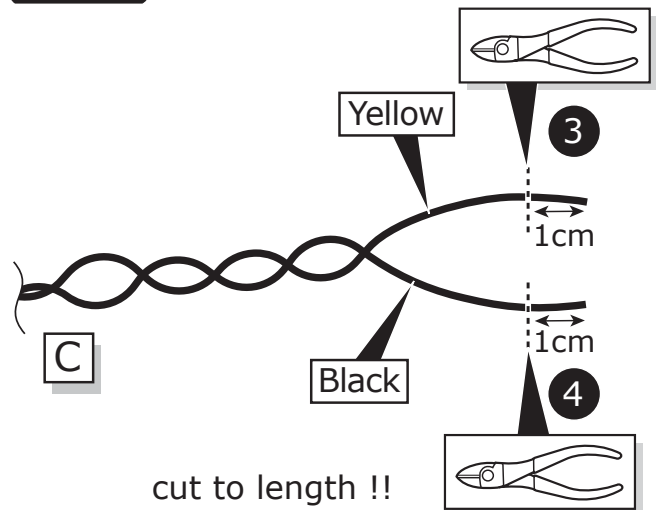
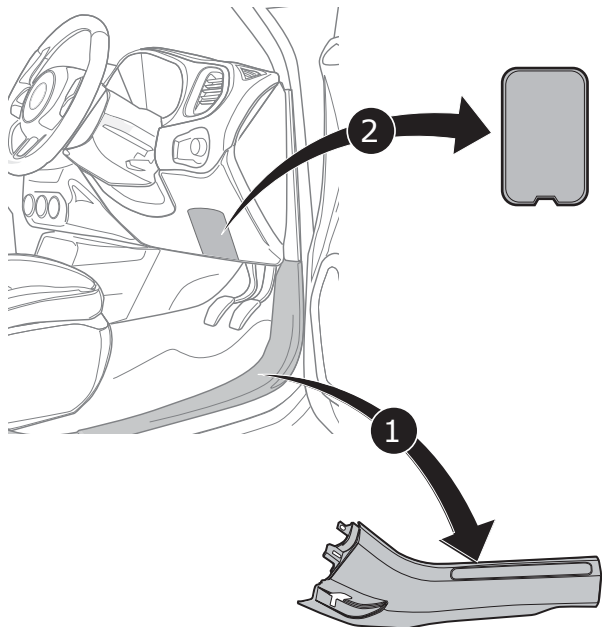


cut to length !!  
minimum 1cm !!

33




# CAN bus connection

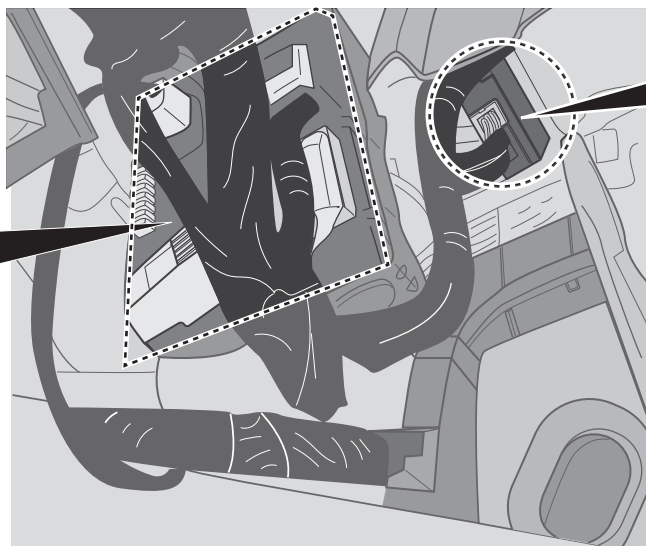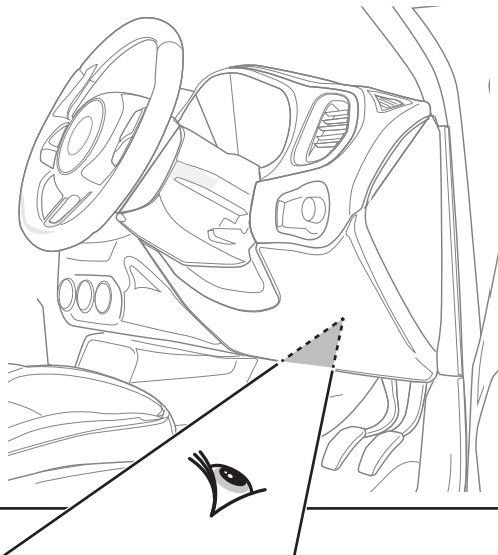

**BCM**  
(Body control Module)


**SGW**  
(Security Gate Way)

## SGW Security Gate Way

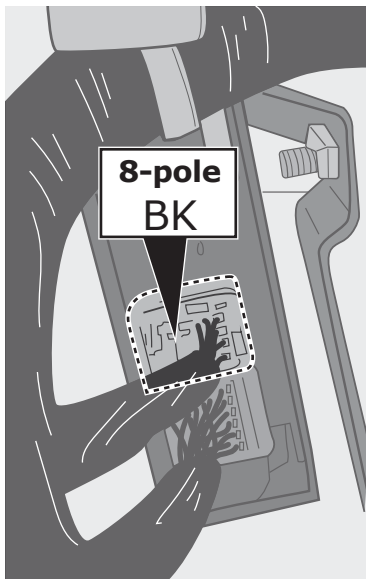


Option 1

**SGW**  
fitted  
verbaud  
équipé

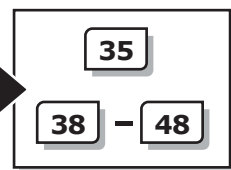

Option 2

**SGW**  
not fitted  
nicht verbaud  
non équipé

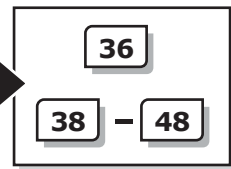

Option 3

**MY 2022 >>**




34


**Option 1**

Without Security Gate Way

With Security Gate Way  
Mit Security Gate Way

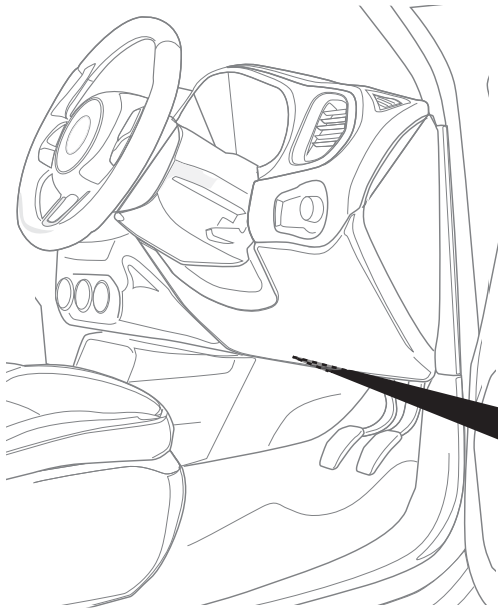

Security Gate Way

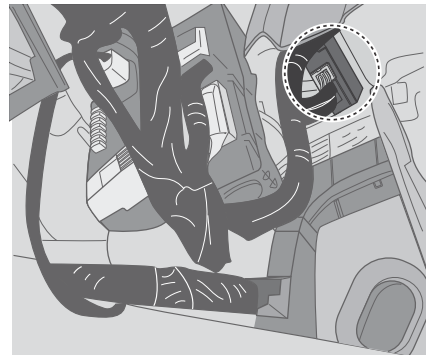


Important!  
Please note  
informations in  
picture 1!

Wichtig!  
Unbedingt Hinweise  
aus Bild 1 beachten!


CAN-Data Wire



PIN3  
PIN8

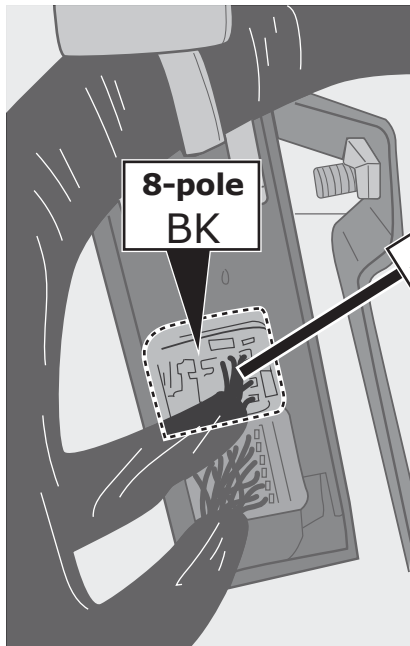

8-pole  
BK

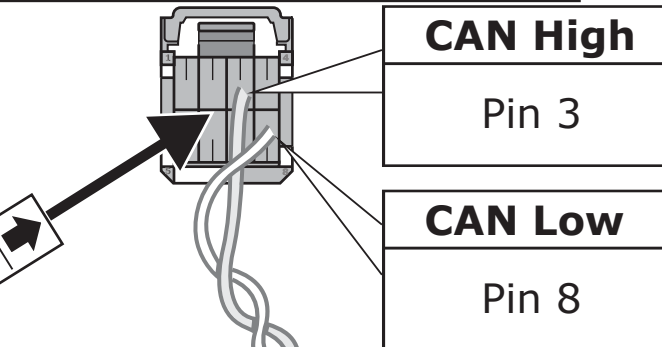


**CAN High**

Pin 3

**CAN Low**

Pin 8

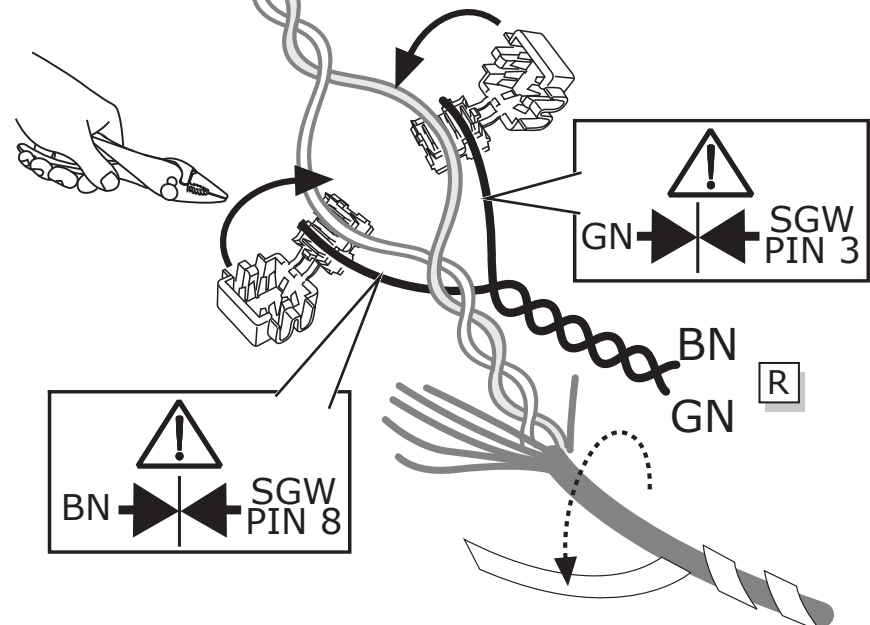



GN SGW  
PIN 3

BN SGW  
PIN 8

BN  
GN R


**Option 2**

Without Security Gate Way

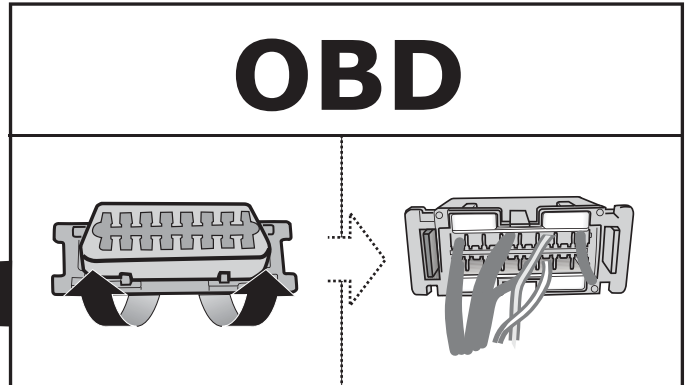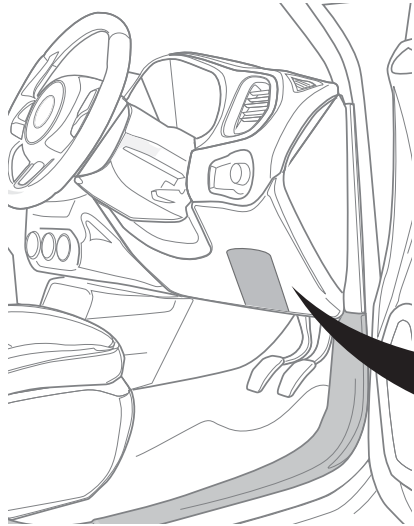


**CAN-Data Wire**  ← PIN3  
 ← PIN11 


**CAN High**  
 Pin 3  
 Blue or Grey

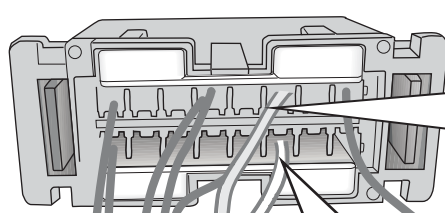


**CAN Low**  
 Pin 11  
 White

  
 Important!  
 Please note  
 informations in  
 picture 1!

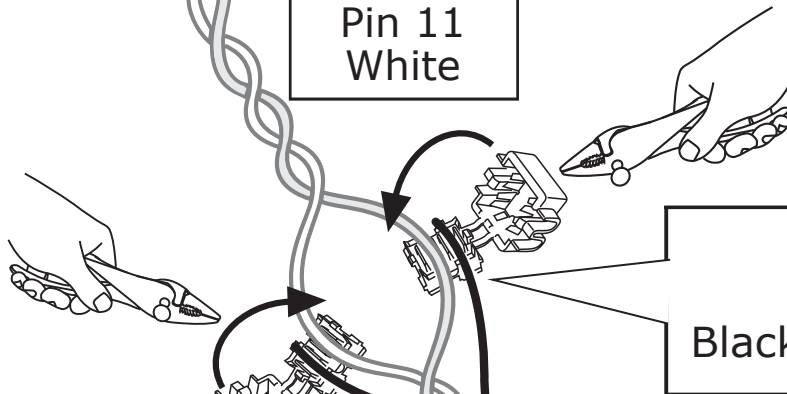

  
 Black → ← OBD  
 PIN 3

  
 Yellow → ← OBD  
 PIN 11


Black  
 Yellow C

36


**Option 3**

With Security Gate Way  
Mit Security Gate Way

**MY 2022 >>**

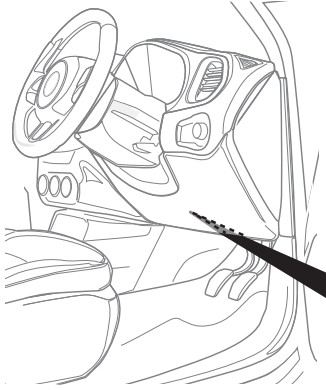


# BCM Security Gate Way


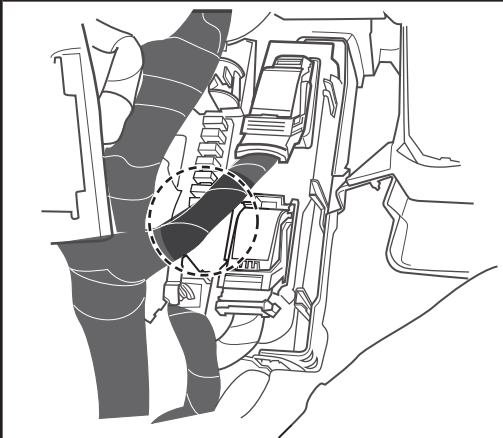








Important!  
Please note  
infomations in  
picture 1!

Wichtig!  
Unbedingt Hinweise  
aus Bild 1 beachten!

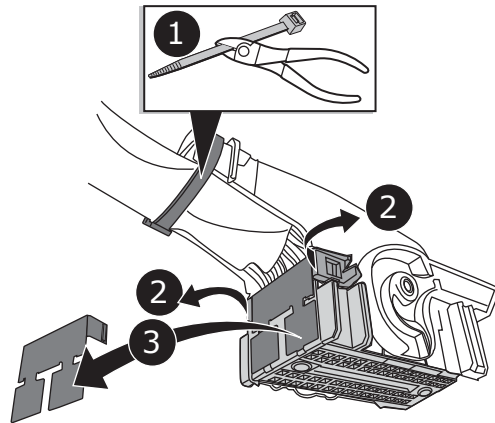



## CAN-Data Wire

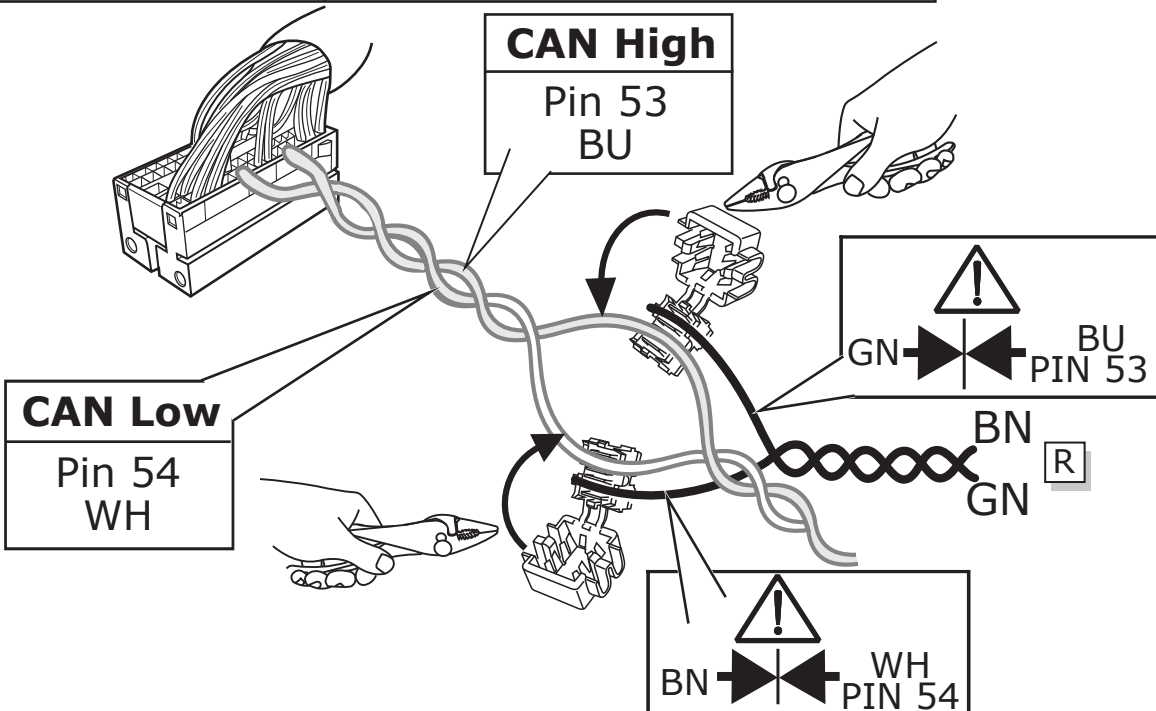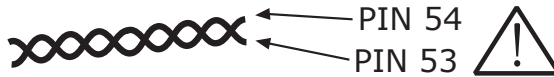

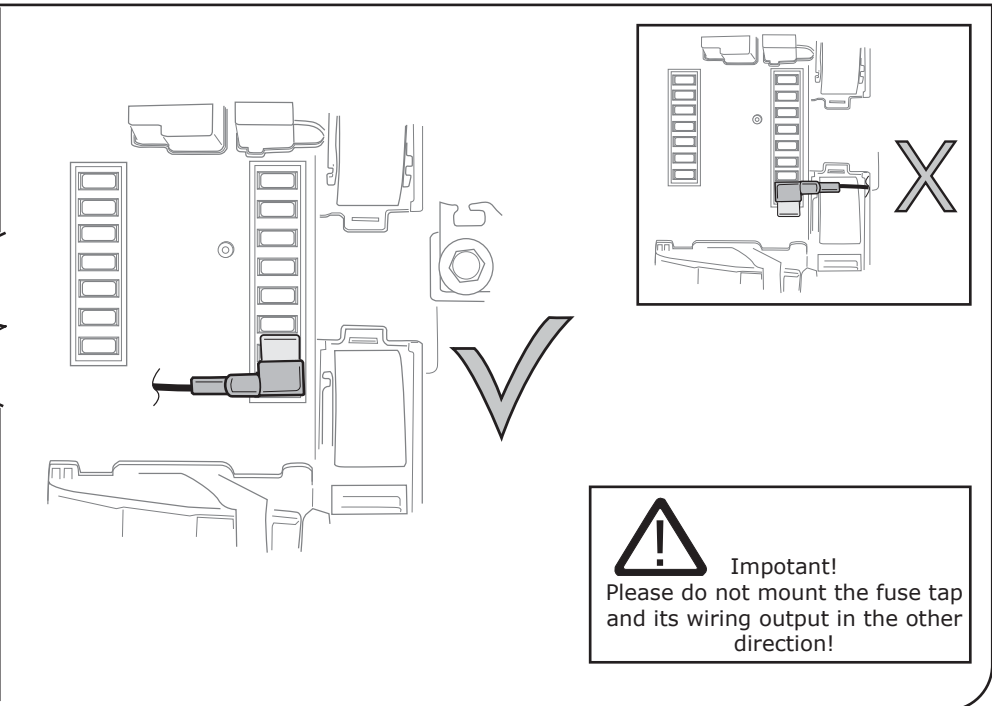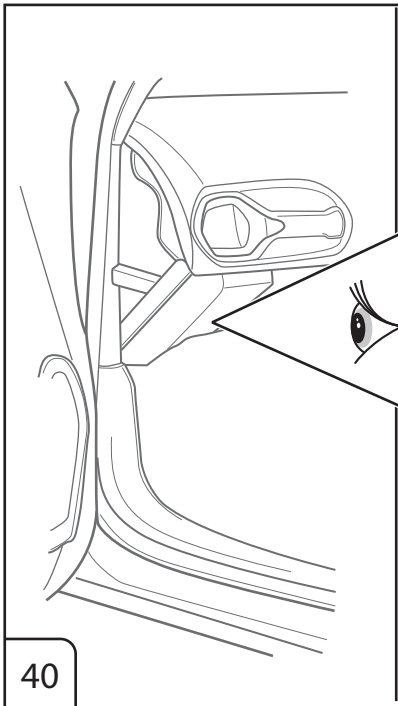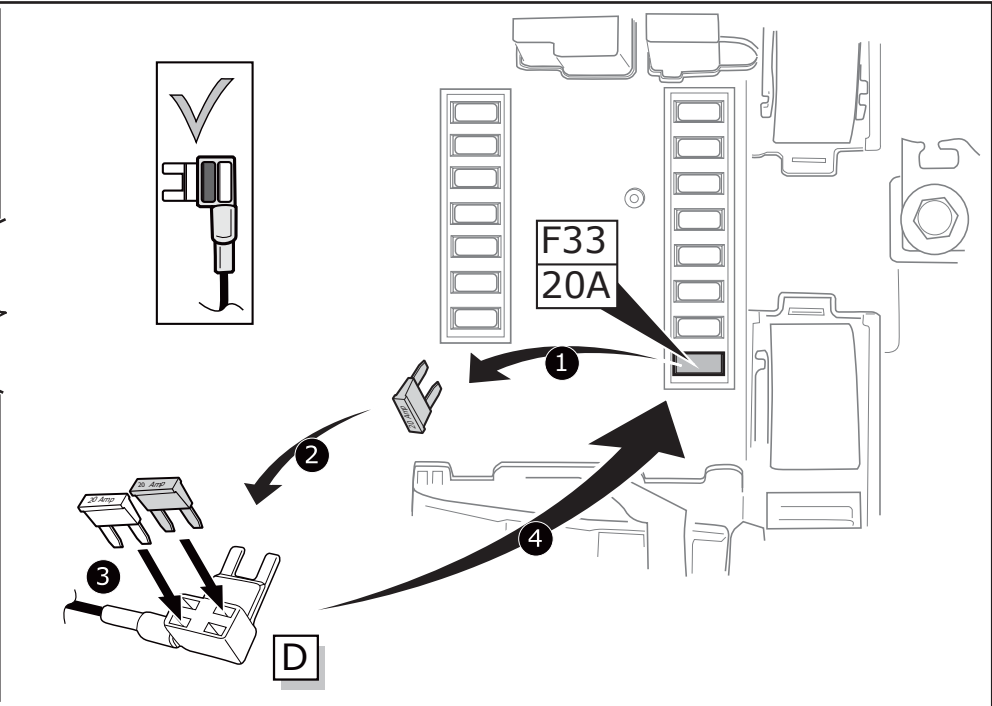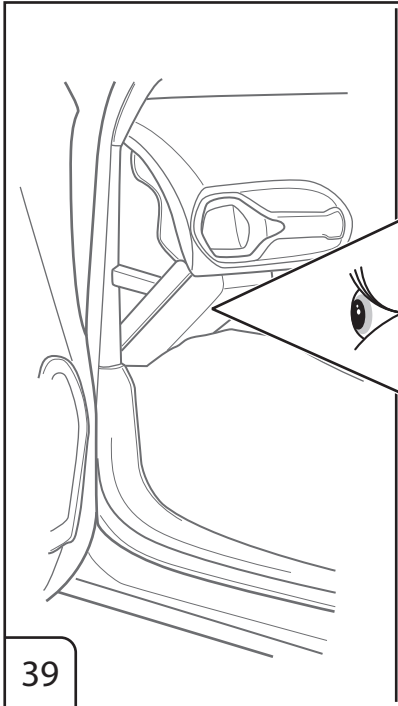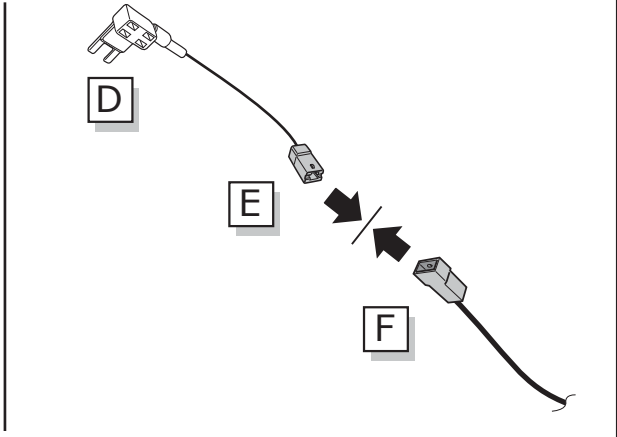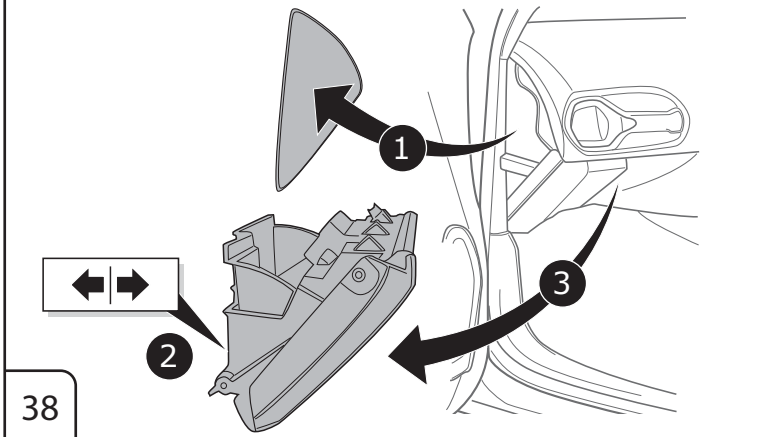


**Optional**

**MAX = 21W**

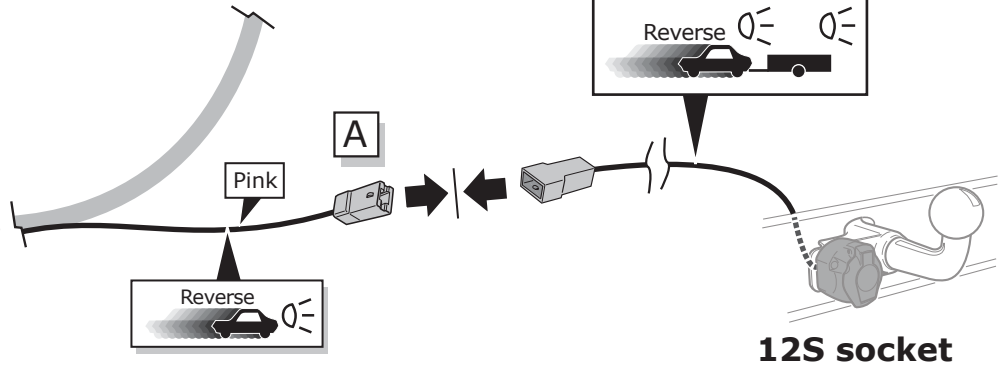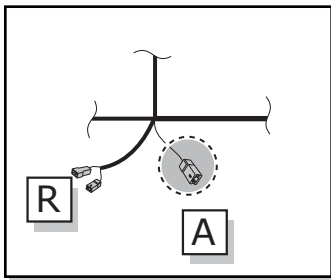


41

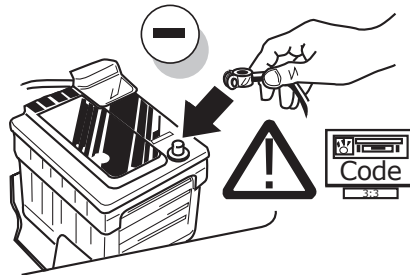

42



**Optional**

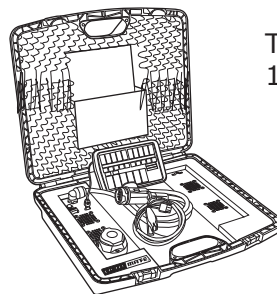

Trailer Simulator for 7- and 13-pin Sockets

43


**Functional test**

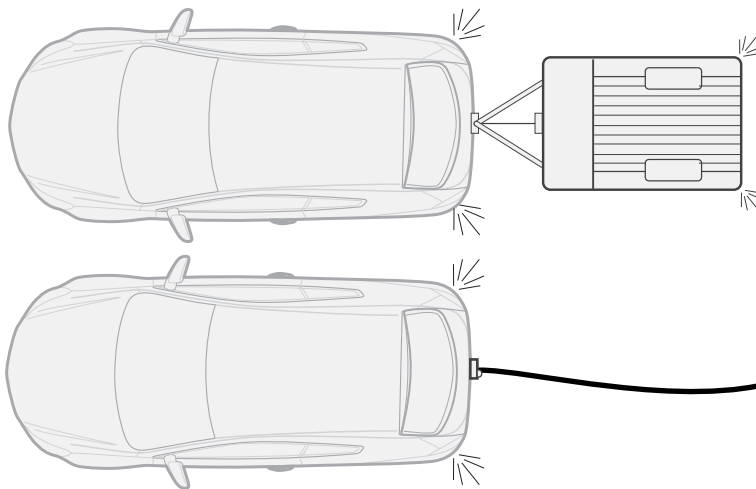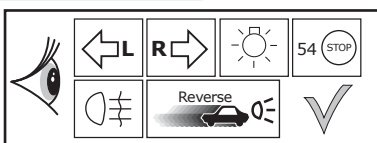


**WARNING**

**LIGHTMATE**

**ECS** part no.  
**LIGHTMATE II**  
**LIGHTMATE III**

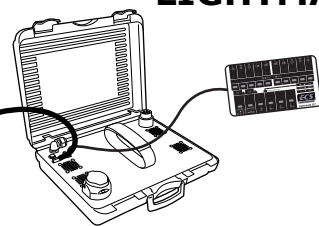


44

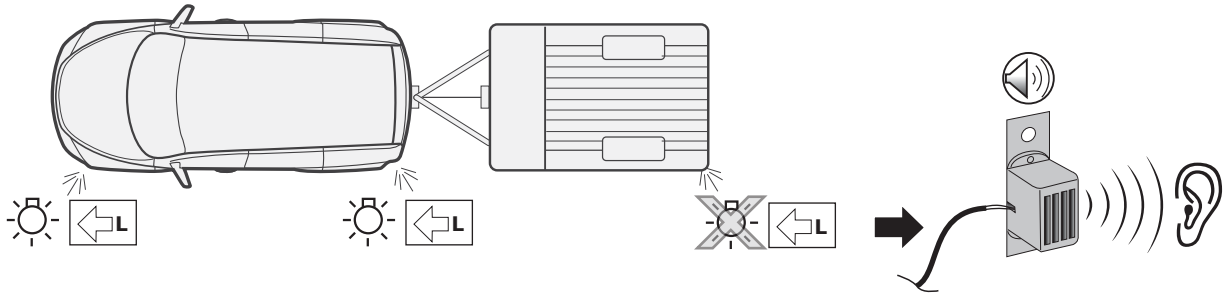



45

**Optional**


Adapter socket

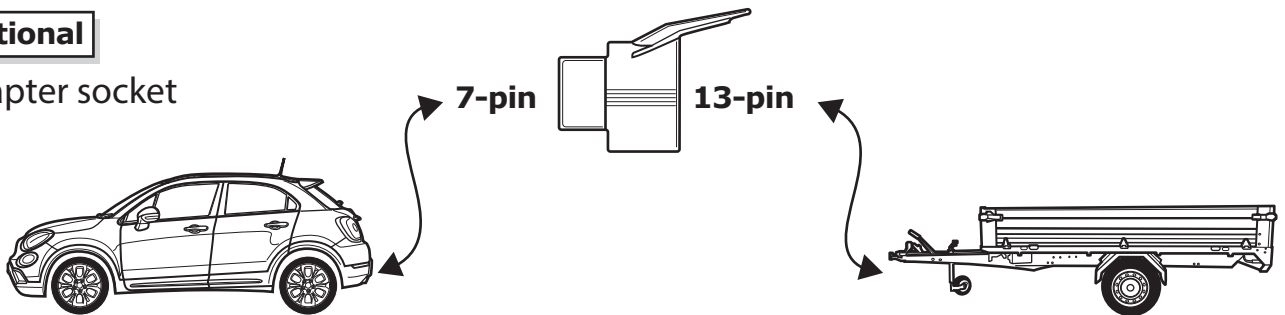

46

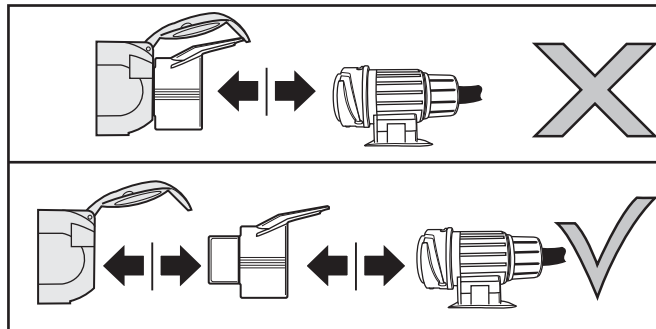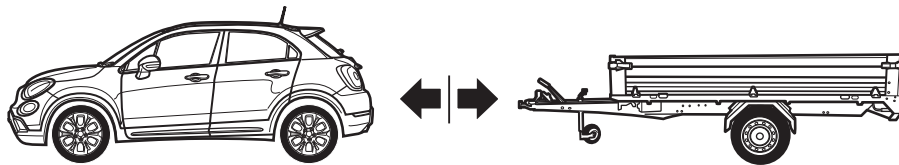

47

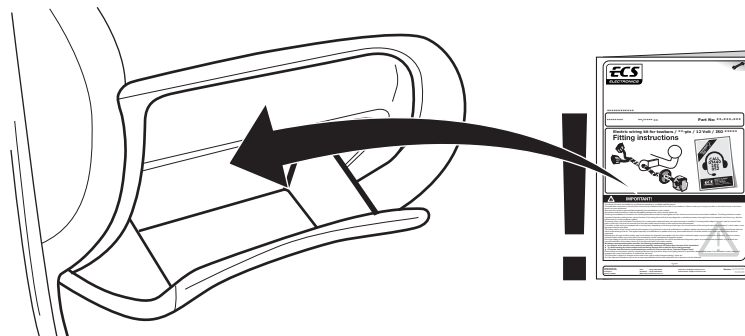

48