

FITTING INSTRUCTION

PG4635

PEUGEOT 3008 / 5008 / VAUXHALL GRANDLAND 2024-

Type Approval Number E11*55R03/00*13304*00

| CO | COMPONENTS | | | | | | |
|------|------------|--|--|--|--|--|--|
| ITEM | QTY | DESCRIPTION | | | | | |
| Α | 1 | Crossbar | | | | | |
| В | 1 | Flange Neck | | | | | |
| С | 1 | L/H Side Arm | | | | | |
| D | 1 | R/H Side Arm | | | | | |
| EP | 1 | Retractable Electrical Mounting Bkt ZM2205 | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| I | | | | | | | |

| BOL | T PACK | |
|------|--------|------------------------------------|
| ITEM | QTY | DESCRIPTION |
| E | 2 | M16 x 50 Bolts, Nuts & S/P Washers |
| F | 2 | M12 x 100 Bolts & Nyloc Nuts |
| G | 4 | M12 x 40 Bolts, Nuts & SP Washers |
| Н | 2 | M10 x 40 Bolts |
| 1 | 2 | M10 x 30mm O/D Washers |
| J | 2 | M12 x 23mm O/D Washers |
| X | 8 | Original Fixings |
| EP1 | 1 | M12 x 25 Bolt & Nyloc Nut |
| EP2 | 1 | M12 Nylon Washer |
| EP3 | 2 | M12 Washers - 23mm O/D |

FITTING PROCEDURE


- 1: Take out boot floor compartment, take out plastic side rails in boot to reveal mounting points each side. Remove fixings on light cluster coverings and remove. Remove one fixing each side of boot opening. Remove fixings in lower edge of bumper. Unclip wheel arch trims and remove four fixings behind wheel arch liners. Remove vertical screw fixing. Remove bumper, unclip wiring looms.
- 2: Remove crash beam (not to be reused), retain fixings. Insert items **C&D** into chassis rails, loosely attach to chassis from inside boot using bolts **H** with washers **I**. Loosely attach items **C&D** to back body of using original fixings **X**. Loosely attach crossbar **A** to items **C&D** using bolts **G**. Tighten all bolts.
- 3: Cut Bumper using bumper cut detail as a guide. Re fit bumper.
- 5: Insert flange neck **B** and electrical bracket **EP** to crossbar **A** using bolts **F** and washers **J**. Tighten bolts.

TIGHTEN ALL BOLTS USING THE FOLLOWING TORQUE SETTINGS

ISO Coarse Pitch: M8=25Nm, M10=51Nm, M12=92Nm, M14=140Nm, M16=215Nm ISO Fine Pitch: M8=28Nm, M10=54Nm, M12=96Nm, M14=150Nm THE VEHICLE MANUFACTURER'S SPECIFICATION FOR THE TRAILER WEIGHT AND NOSE LOAD LIMITS MUST BE OBSERVED.



FITTING INSTRUCTION

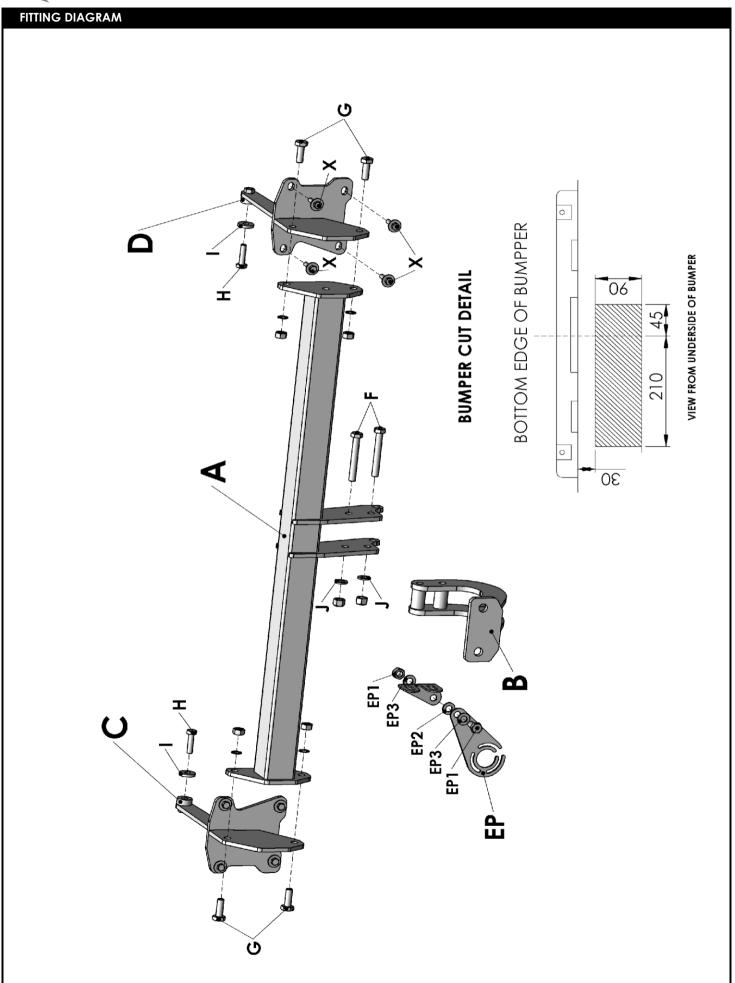

IMPORTANT PRODUCT INFORMATION & GUARANTEE

(TO BE RETAINED WITH THE VEHICLE AND PASSED TO SUBSEQUENT OWNERS)

Thank you for purchasing a PCT Automotive product. Please read the following information carefully before fitting or using your PCT Automotive product.

GUARANTEE

We shall free of charge either repair or at our option replace defective goods where the defects appear

- i. if the goods are a towbar manufactured by us, during the economic lifetime of the vehicle it was first fitted to
- ii. in the case of all other products manufactured by us, within 3 years following the date of your order
- iii. in the case of a product not manufactured by us, we will pass on any warranty offered to us by the manufacturer of that product or component

PROVIDED THAT (in each case) such defects shall be found to our reasonable satisfaction to have arisen substantially from our faulty design, workmanship or materials and have not arisen by reason of a failure to follow our instructions (whether written or oral), any modification, misuse, neglect or interference with the installation, any damage or abuse to the goods or vehicle by impact or vandalism or by a failure to carry out reasonable inspection, maintenance and/or adjustment. At all times, the above guarantee is subject to our standard terms and conditions of sale a copy of which is available upon request from our offices.

TOWING LIMITS

Our towbars have been designed for towing up to the vehicle manufacturer's maximum recommended trailer weight and nose load limits for your model. Towing with gross weights above that recommended at any time will invalidate the guarantee and cancel any liability for damage. Towing a twin axle trailer, towing over rough ground or using a bicycle/motorcycle carrier, etc, exerts extreme loads on to a towbar and extra care should be taken in these situations not to exceed the vehicle manufacturer's maximum recommended limits.

PRODUCT IDENTIFICATION MARK

Your product carries a product identification mark. This mark carries important product and batch code information and if the product is type approved it also carries the type approval details which are required by law. Under no circumstances should this mark be defaced, removed or damaged.

INSTALLATION, INSPECTION, MAINTENANCE AND ADJUSTMENT

GENERAL INSTALLATION

- ⇒ All products should only be fitted by competent persons. Electrical products must only be fitted by an experienced auto-electrician.
- ⇒ Read the product fitting instructions carefully and check all components are included in the fitting kit before commencing installation.
- ⇒ Check vehicle for corrosion and/or accident damage. Towbars should not be fitted to any vehicle suffering from corrosion or accident damage or which is not in a roadworthy condition.
- ⇒ Clean off all road dirt, underseal and sound deadening mastic where parts are to fit to ensure correct seating of all components.
- Bumper cut information is given as a guide only. Variations in models may occur therefore the fitter should always check that the bumper cut is necessary and of the correct size and shape before commencing with the cut.
- ⇒ All drilling swarf should be removed from the vehicle and all holes drilled in the vehicle should be treated with an appropriate rust inhibitor.
- ⇒ Do not fully tighten bolts before towbar is completely fitted unless instructed to do so in the fitting instruction, this will allow some variances to be overcome before final tightening of bolts.

PAINT & CORROSION

Towbars manufactured by PCT Automotive undergo a phosphate chemical pre-treatment prior to a finishing coat being applied. For long lasting good looks and in order to prevent corrosion the towbar should be regularly inspected for paint damage and wherever necessary re-painted in an appropriate finishing paint or underseal. The vehicle should also be regularly checked for any corrosion that could affect the towbar installation. Towbars should not be used on any vehicle suffering from corrosion that could affect the towbar installation.

BOLTS

All towbar fixing bolts should be checked initially after the first 300 towing miles, or the initial 500 miles of driving uncoupled, and then every 3,000 towing miles or to coincide with the vehicle manufacturer's recommended service intervals, whichever is the sooner. All towbar fixing bolts should be tightened using an appropriate torque wrench to the settings specified in the towbar fitting instruction.

ELECTRICAL INSTALLATION, TEST/COMMISSIONING AND MAINTENANCE

Failure to comply with the following instructions may cause damage to the towing vehicle's wiring loom and/or towing electrics installation.

Where displacement tap connectors e.g. Scotchloks, are the preferred method of connection, always use the correct colour coded tap connector for the size of cable to which it is to be connected. All towing relays and modules manufactured by PCT Automotive have cabling with a copper cross-sectional area in the range 0.5mm² to 1mm²

After installation of the 12N/12S/13Pin sockets, prior to testing, a water displacement agent e.g. WD40 should be applied into the rear connection void through the water drain hole at the bottom of the sockets and also into the front pins under the socket flap. This socket maintenance should be carried out at least twice a year in the spring and autumn.

The towing electrics test procedure must be undertaken with the engine running. If any of the towing relays fail to function correctly, with the engine running and no other vehicle electrical systems turned on, check that the voltage across the vehicle's battery is between 13V and 14V approx, if this voltage is not correct, check the condition of the vehicle's battery/alternator.

Always ensure that the trailer/caravan/lighting board's own electrical systems are installed and functioning correctly before coupling to the vehicle's 12N/12S/13Pin sockets.

Every six months (spring and autumn recommended) the battery and alternator of the vehicle should be checked to determine correct electrical functioning. All connections of the electrical installation including the earth should be checked for mechanical soundness and electrical quality. Plugs, sockets, relays and fixings should be checked for water ingress, mechanical soundness, electrical quality and general wear and tear.

| ΡΙσοςο | complete the | a fallowing | information to | validata tha | augrantag s | and for future | rafaranca |
|--------|--------------|--------------|----------------------------|-----------------|-------------|----------------|------------|
| riease | complete m | e ioiiowiiic | i ii ii Oi III ali Oi I ((|) vaiiuale liie | uuarantee a | and for future | reierence. |

VEHICLE OWNER NAME & ADDRESS:

VEHICLE MAKE & MODEL: VEHICLE REGISTRATION NUMBER:

FITTER NAME & ADDRESS: DATE TOWBAR FITTED:

If you have any comments or suggestions about the PCT Automotive product fitted to your vehicle, please address them to PCT Automotive Limited, New Street, Holbrook Industrial Estate, Sheffield S20 3GH or email techsupport@pctautomotive.com Your comments will help us in our aim to continually upgrade our products to meet the high standards expected by our customers.